


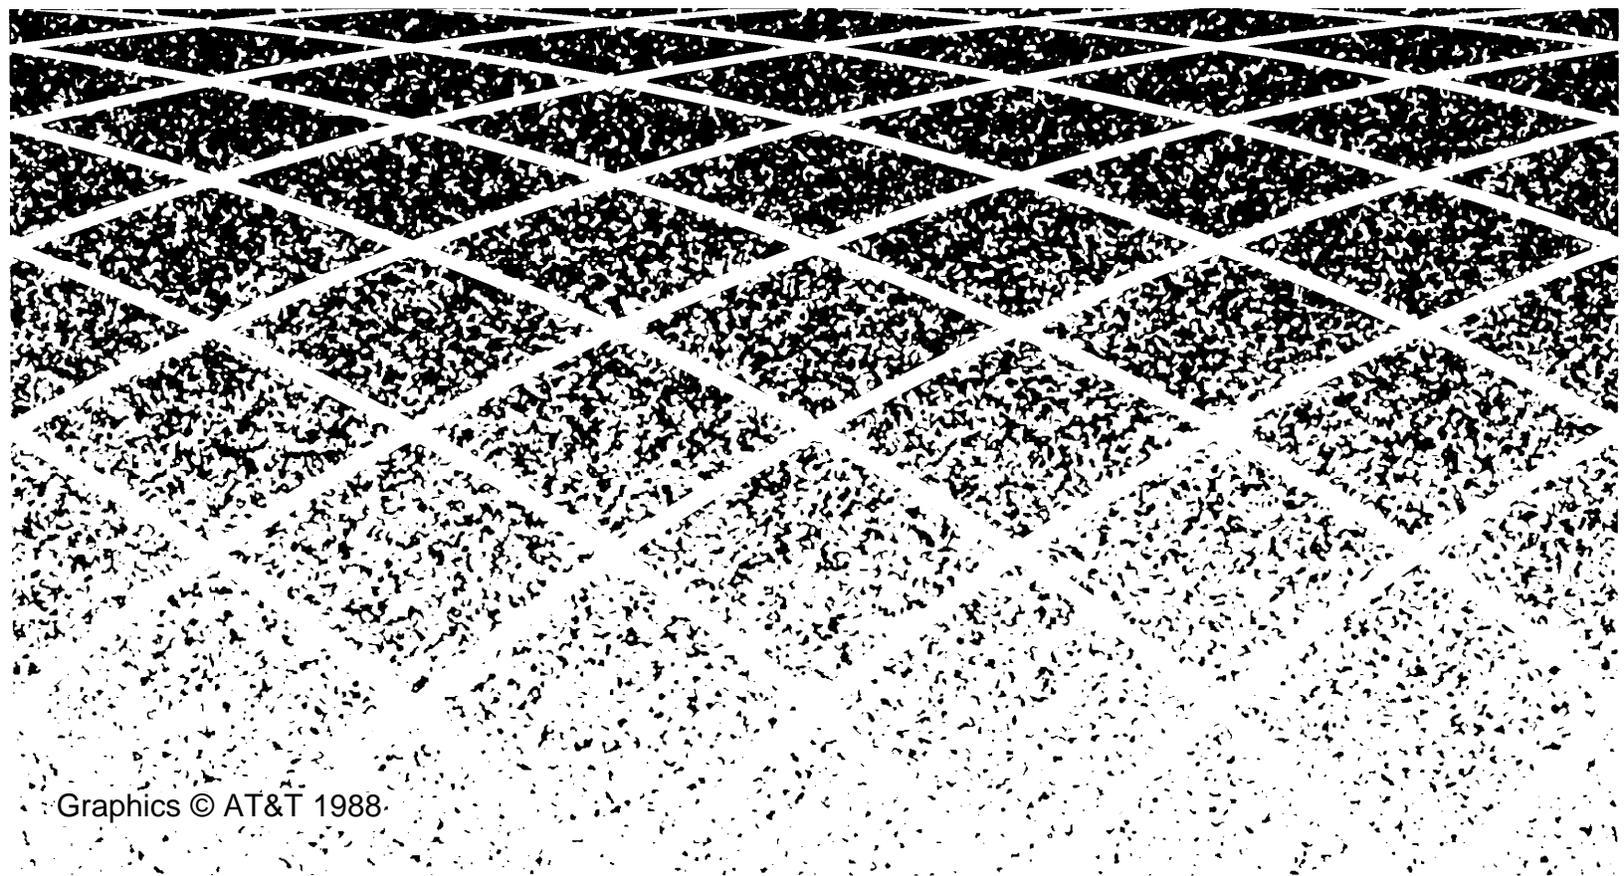

MG9150J
Issue 1
October 1995

PARTNER® Plus, PARTNER II Communications System Programming Quick Reference



Centralized Telephone Programming Quick Reference

Place the Programming Overlay on the dial pad of the system display phone at extension 10 or 11
(Extension 11 programming: P+ ≥ R3.0, PII ≥ R1.0)

TO ENTER PROGRAMMING MODE

PRESS [*Feature*] [*0*] [*0*]

PRESS [*System Program*] [*System Program*] [*Central Tel Program*]

DIAL the extension number to be programmed

Buttons on which lines or pools are assigned for the extension light up to show the current Line Ringing setting; remaining buttons can be programmed with Auto Dial numbers or features

TO PROGRAM ANOTHER FEATURE AT THE SAME EXTENSION

After you program one feature, continue with the instructions in the box for the next feature

TO CHANGE SETTING FOR ANOTHER EXTENSION

PRESS [*Central Tel Program*]

DIAL the new extension's number TO ERASE A FEATURE OR AUTO DIAL BUTTON

PRESS the programmed button

PRESS [*Mic*]

TO END PROGRAMING MODE

PRESS [*Feature*] [*0*] [*0*]

NOTE: Program Automatic Line Selection or Extension Name Display first.

AUTOMATIC LINE SELECTION

P+ ≥ R1.0 (p. 5-18)
PII ≥ R1.0 (p. 5-19)

PRESS [*±*] [*±*]

PRESS the line/pool/intercom buttons in the desired order

PRESS [***] [***]

Key Extension: Outside lines 01-24 PII, 01-12 P+ left [*Intercom*] ✓

Pooled Extension: (PII only) Pool 880 button 1, button 2, left [*Intercom*], right [*Intercom*] ✓

Pools 881-883, individual lines

EXTENSION NAME DISPLAY

P+ ≥ R3.1 (p. 5-53)
PII ≥ R3.1 (p. 5-85)

PRESS left [*Intercom*]

Enter the character codes for the name (See Table 5-1 "Character Codes" on p. 5-51 P+ or 5-78 PII)

PERSONAL SPEED DIAL NUMBERS

P+ ≥ R1.0 (p. 5-114)
PII ≥ R1.0 (p. 5-149)

PRESS [*Feature*]

DIAL a two-digit code (80-99)

DIAL the phone number—up to 28 digits ≥ R4.0, 20 digits ≤ R3.1, including special functions (see "Special Dialing Functions," p. 5-127 P+ or 5-164 PII)

AUTO DIAL NUMBERS—OUTSIDE AND INSIDE

P+ ≥ R1.0 (p. 5-14)
PII ≥ R1.0 (p. 5-14)

PRESS a programmable button

To program an outside number:

DIAL the phone number—up to 28 digits ≥ R4.0, 20 digits ≤ R3.1, including special functions (see "Special Dialing Functions," p. 5-127 P+ or 5-164 PII)

To program an extension number:

PRESS left [*Intercom*]

DIAL the extension number (to ring the extension) or [***] plus the extension number (to voice-signal the extension)

LINE RINGING

P+ ≥ R1.0 (p. 5-89)
PII ≥ R1.0 (p. 5-124)

PRESS each line or pool button until the desired ringing option appears in the display

- Immediate ring (*green steady*) ✓ Lines
- No ring (*green fast flutter*) ✓ Pools (PII only) ≥ R4.0
- Delayed ring—starts ringing after 20 seconds (*green slow flashing*)

System Features

ACCOUNT CODE ENTRY

P+ ≥ R3.0 (p. 5-5)
PII ≥ R3.0 (p. 5-5)

PRESS a programmable button

PRESS [*Feature*] [*1*] [*2*]

BACKGROUND MUSIC

P+ ≥ R3.1 (p. 5-22)
PII ≥ R3.1 (p. 5-34)

PRESS a programmable button

PRESS [*Feature*] [*1*] [*9*]

CALL COVERAGE

PII ≥ R4.0 (p. 5-36)

PRESS a programmable button

PRESS [*Feature*] [*2*] [*0*]

DIAL (optional) two-digit *originating* extension number

DIAL (optional) two-digit *covering* extension number

CALL FORWARDING/CALL FOLLOW-ME

P+ ≥ R3.0 (p. 5-24)
PII ≥ R1.0 (p. 5-41)

PRESS a programmable button

PRESS [*Feature*] [*1*] [*1*]

DIAL (optional) two-digit *originating* extension number

DIAL (optional) two-digit *destination* extension number

CALL PICKUP

P+ ≥ R1.0 (p. 5-29)
PII ≥ R1.0 (p. 5-46)

PRESS a programmable button

PRESS left [*Intercom*] [*6*]

DIAL the two-digit extension number

CALLER ID INSPECT

PII ≥ R3.0 (p. 5-50)

PRESS a programmable button with lights

PRESS [*Feature*] [*1*] [*7*]

CALLER ID NAME DISPLAY

PII ≥ R3.0 (p. 5-52)

PRESS a programmable button with lights

PRESS [*Feature*] [*1*] [*6*]

CONFERENCE DROP

P+ ≥ R1.0 (p. 5-34)
PII ≥ R1.0 (p. 5-56)

PRESS a programmable button

PRESS [*Feature*] [*0*] [*6*]

DIRECT LINE PICKUP—ACTIVE LINE

P+ ≥ R3.0 (p. 5-37)
PII ≥ R1.0 (p. 5-67)

PRESS a programmable button

DIAL left [*Intercom*] [*6*] [*8*]

DIRECT LINE PICKUP—IDLE LINE

P+ ≥ R3.0 (p. 5-39)
PII ≥ R1.0 (p. 5-69)

PRESS a programmable button

DIAL left [*Intercom*] [*6*]

DO NOT DISTURB

P+ ≥ R1.0 (p. 5-47)
PII ≥ R1.0 (p. 5-78)

PRESS a programmable button with lights

PRESS [*Feature*] [*0*] [*1*]

EXCLUSIVE HOLD

P+ ≥ R1.0 (p. 5-52)
PII ≥ R1.0 (p. 5-84)

PRESS a programmable button

PRESS [*Feature*] [*0*] [*2*]

NOTE: All page references are to PARTNER Plus and PARTNER II release 4.1 documentation.

To order additional copies, call the DDC at 1-800-252-4076 or fax at 513-768-5514.
Refer to document number MG9150J.

System Features Continued

GROUP CALLING—RING/PAGE
P+ 1 Grp ≤ R2.0, 4 Grp ≥ R3.0 (p. 5-64)
PII 4 Grp ≥ R1.0 (p. 5-96)
For ringing the group:
 PRESS a programmable button
 PRESS left [*Intercom*] [*Z*]
 DIAL a Calling Group number (1-4)
For paging the group: P+
 PRESS a programmable button
 PRESS left [*Intercom*] [***] [*Z*]
 DIAL a Calling Group number (1-4)

GROUP HUNTING—RING/VOICE SIGNAL
P+ ≥ R3.0 (Grp 7 ≥ R3.1) (p. 5-67)
PII ≥ R1.0 (Grp 7 ≥ R3.0) (p. 5-99)
For ringing the first available extension:
 PRESS a programmable button
 PRESS left [*Intercom*] [*Z*] [*Z*]
 DIAL a Hunt Group number (1-7)
For voice signaling the first available extension:
 PRESS a programmable button
 PRESS left [*Intercom*] [***] [*Z*] [*Z*]
 DIAL a Hunt Group number (1-6)

GROUP PICKUP
P+ 1 Grp ≤ R2.0, 4 Grp ≥ R3.0 (p. 5-70)
PII 4 Grp ≥ R1.0 (p. 5-102)
 PRESS a programmable button
 PRESS left [*Intercom*] [*6*] [*6*]
 DIAL a Pickup Group number (1-4)

LAST NUMBER REDIAL
P+ ≥ R1.0 (p. 5-82)
PII ≥ R1.0 (p. 5-114)
 PRESS a programmable button
 PRESS [*Feature*] [*0*] [*5*]

LOUDSPEAKER PAGING
P+ ≥ R1.0 (p. 5-91)
PII ≥ R1.0 (p. 5-126)
 PRESS a programmable button
 PRESS left [*Intercom*] [*Z*] [*0*]

MANUAL SIGNALING
P+ ≥ R4.0 (p. 5-97)
PII ≥ R3.0 (p. 5-132)
 PRESS a programmable button
 PRESS [*Feature*] [*1*] [*3*]
 DIAL the two-digit extension number (to ring extension) or
 DIAL [***] plus the two-digit extension number (to voice-signal the extension) 

MESSAGE LIGHT OFF
P+ ≥ R1.0 (p. 5-99)
PII ≥ R1.0 (p. 5-134)
 PRESS a programmable button
 PRESS [*Feature*] [*1*] [*0*]
 DIAL (optional) two-digit extension number

MESSAGE LIGHT ON
P+ ≥ R1.0 (p. 5-101)
PII ≥ R1.0 (p. 5-136)
 PRESS a programmable button
 PRESS [*Feature*] [*0*] [*9*]
 DIAL (optional) two-digit extension number

PRIVACY
P+ ≥ R1.0 (p. 5-117)
PII ≥ R1.0 (p. 5-159)
 PRESS a programmable button with lights
 PRESS [*Feature*] [*0*] [*Z*] 

RECALL
P+ ≥ R1.0 (p. 5-118)
PII ≥ R1.0 (p. 5-160)
 PRESS a programmable button
 PRESS [*Feature*] [*0*] [*3*]

SAVE NUMBER REDIAL
P+ ≥ R1.0 (p. 5-123)
PII ≥ R1.0 (p. 5-165)
 PRESS a programmable button
 PRESS [*Feature*] [*0*] [*4*]

SIMULTANEOUS PAGING
P+ ≥ R4.0 (p. 5-125)
PII ≥ R4.0 (p. 5-167)
 PRESS a programmable button
 PRESS left [*Intercom*] [***] [*Z*] [*0*]

STATION LOCK
P+ ≥ R4.1 (p. 5-132)
PII ≥ R4.1 (p. 5-175)
 PRESS a programmable button
 PRESS [*Feature*] [*2*] [*1*] 

TOUCH-TONE ENABLE
P+ ≥ R1.0 (p. 5-144)
PII ≥ R1.0 (p. 5-187)
 PRESS a programmable button
 PRESS [*Feature*] [*0*] [*8*]

VMS COVER
P+ ≥ R3.1 (p. 5-151)
PII ≥ R3.0 (p. 5-195)
 PRESS a programmable button with lights
 PRESS [*Feature*] [*1*] [*5*] 

VOICE INTERRUPT ON BUSY TALK-BACK
P+ ≥ R3.1 (p. 5-158)
PII ≥ R3.1 (p. 5-202)
 PRESS a programmable button with lights
 PRESS [*Feature*] [*1*] [*8*] 

VOICE MAILBOX TRANSFER
P+ ≥ R3.1 (p. 5-159)
PII ≥ R3.0 (p. 5-203)
 PRESS a programmable button
 PRESS [*Feature*] [*1*] [*4*]

- ✓ = Factory setting
-  = Button with lights required
-  = Button with lights recommended
- ≥ **RX.X** = Indicates release when feature was first added to system e.g. ≥ R3.0

System Programming Quick Reference

Place the Programming Overlay on the dial pad of the system display phone at extension 10 or 11

P+ ≥ R 3.0, PII ≥ R1.0

TO START SYSTEM PROGRAMMING TO END SYSTEM PROGRAMMING

PRESS [*Feature*] [*0*] [*0*]

PRESS [*Feature*] [*0*] [*0*]

PRESS [*System Program*]

TO USE A SPECIFIC PROCEDURE

PRESS [*System Program*]

DIAL [*#*] and three-digit procedure code
Example: [*#*] [*1*] [*0*] [*1*] for System Date

TO CYCLE THROUGH SYSTEM PROGRAMMING PROCEDURES

PRESS [*Next Procedure*] or [*Prev Procedure*]

NOTES: Procedures #399, #609, and #728—shown below in dashed boxes—are skipped when cycling.

TO CYCLE THROUGH AVAILABLE SETTINGS

PRESS [*Next Data*] or [*Prev Data*]

TO RETURN TO FACTORY SETTING

PRESS [*Remove*]

System

SYSTEM DATE
P+ ≥ R1.0 (p. 5-135)
PII ≥ R1.0 (p. 5-178)
DIAL #101
DIAL the date in MMDDYY form

SYSTEM DAY
P+ ≥ R1.0 (p. 5-136)
PII ≥ R1.0 (p. 5-179)
DIAL #102
DIAL 1 = Sunday ✓ 5 = Thursday
2 = Monday 6 = Friday
3 = Tuesday 7 = Saturday
4 = Wednesday

SYSTEM TIME
P+ ≥ R1.0 (p. 5-142)
PII ≥ R1.0 (p. 5-185)
DIAL #103
DIAL the time in HHMM 24-hour military format

NUMBER OF LINES
*See IMPORTANT on facing page
P+ ≥ R1.0 (p. 5-108)
PII ≥ R1.0 (p. 5-143)
DIAL #104
DIAL two digits (01–12 P+, 01–24 PII) for the number of outside lines to be assigned to every extension
✓ 2 per 206 or 200 module
✓ 4 per 400 module

TRANSFER RETURN RINGS
P+ ≥ R1.0 (p. 5-150)
PII ≥ R1.0 (p. 5-194)
DIAL #105
DIAL one digit (0–9) for the number of rings before the call returns
✓ =4 rings
0 rings = no return

RECALL TIMER DURATION
P+ ≥ R1.0 (p. 5-120)
PII ≥ R1.0 (p. 5-162)
DIAL #107
DIAL two digits (01–80) to set the length of a switchhook flash
✓ =18 (450 msec)

ROTARY DIALING TIMEOUT
P+ ≥ R1.0 (p. 5-122)
PII ≥ R1.0 (p. 5-164)
DIAL #108
DIAL 1 = 4 sec 3 = 12 sec
2 = 8 sec ✓

OUTSIDE CONFERENCE DENIAL
P+ ≥ R1.0 (p. 5-113)
PII ≥ R1.0 ≠ R2.0 (p. 5-148)
DIAL #109
DIAL 1 = Allowed ✓
2 = Disallowed

AUTOMATIC SYSTEM ANSWER DELAY
PII ≥ R3.0 (p. 5-24)
DIAL #110
DIAL a ring delay number (0–9)
✓ = 2 rings

AUTOMATIC SYSTEM ANSWER BUTTON
PII ≥ R3.0 (p. 5-21)
DIAL #111
DIAL 1 = Assigned
2 = Not Assigned ✓
3 = Select Button then press a programmable button

DIRECT EXTENSION DIAL DELAY
PII ≥ R3.0 (p. 5-62)
DIAL #112
DIAL a ring delay number (0–9)
✓ = 2 rings

DIRECT EXTENSION DIAL BUTTON
PII ≥ R3.0 (p. 5-59)
DIAL #113
DIAL 1 = Assigned
2 = Not Assigned ✓
3 = Select Button then press a programmable button

OUTGOING CALL RESTRICTION BUTTON
P+ ≥ R3.1 (p. 5-111)
PII ≥ R3.1 (p. 5-146)
DIAL #114
DIAL 1 = Assigned
2 = Not Assigned ✓
3 = Select Button then press a programmable button

WAKE UP SERVICE BUTTON
P+ ≥ R3.1 (p. 5-160)
PII ≥ R3.1 (p. 5-204)
DIAL #115
DIAL 1 = Assigned
2 = Not Assigned ✓
3 = Select Button then press a programmable button

CALL COVERAGE RINGS
PII ≥ R4.0 (p. 5-40)
DIAL #116
DIAL one digit (1–9) for the number of rings before the call is sent to the covering extension
✓ = 2 rings

VMS COVER RINGS
P+ ≥ R4.0 (p. 5-153)
PII ≥ R4.0 (p. 5-197)
DIAL #117
DIAL one digit (1–9) for the number of rings before the call is sent to the voice messaging system
✓ = 3 rings

RING ON TRANSFER
P+ ≥ R4.1 (p. 5-121)
PII ≥ R4.1 (p. 5-163)
DIAL #119
DIAL 1 = Active ✓
2 = Not Active

AUTOMATIC SYSTEM ANSWER MODE
PII ≥ R4.1 (p. 5-27)
DIAL #121
DIAL 1 = Hold ✓
2 = Disconnect
3 = Ring

ASA & DXD RECORD/PLAYBACK

ASA = I891 1 = Record 2 = Play
DXD = I892 # = Stop

Lines

DIAL MODE

P+ ≥ R1.0 (p. 5-36)

PII ≥ R1.0 (p. 5-58)

DIAL #201

DIAL a line number (01–12 P+, 01–24 PII)

DIAL 1 = Touch-Tone ✓
2 = Rotary

PRESS [*Next Item*] to program another line

HOLD DISCONNECT TIME

P+ ≥ R1.0 (p. 5-74)

PII ≥ R1.0 (p. 5-106)

DIAL #203

DIAL a line number (01–24)

DIAL 1 = Long (450 msec) ✓
2 = Short (50 msec)

PRESS [*Next Item*] to program another line

AUTOMATIC SYSTEM ANSWER LINES

PII ≥ R3.0 (p. 5-25)

DIAL #204

DIAL a line number (01–24)

DIAL 1 = Assigned
2 = Not Assigned ✓

PRESS [*Next Item*] to program another line

DIRECT EXTENSION DIAL LINES

PII ≥ R3.0 (p. 5-63)

DIAL #205

DIAL a line number (01–24)

DIAL 1 = Assigned
2 = Not Assigned ✓

PRESS [*Next Item*] to program another line

GROUP CALL DISTRIBUTION

P+ ≥ R3.1 (p. 5-62)

PII ≥ R3.0 (p. 5-94)

DIAL #206

DIAL a group number (1–6, 7 for VMS)

DIAL a line number (01-12P+, 01–24 PII)

DIAL 1 = Assigned
2 = Not Assigned ✓
3 = VMS Line Cover (only for hunt group 7)

PRESS [*Next Item*] to program another line

POOL LINE ASSIGNMENT

PII ≥ R4.0 (p. 5-157)

DIAL #207

DIAL a line number (01–24)

DIAL 1 = No Pool
2 = Main Pool 880 ✓
3 = Pool 881
4 = Pool 882
5 = Pool 883

PRESS [*Next Item*] to program another line

LINE COVERAGE EXTENSION

P+ ≥ R4.0 (p. 5-88)

PII ≥ R4.0 (p. 5-122)

DIAL #208

DIAL a line number (01–12 P+, 01–24 PII)

DIAL an extension number (10–33 P+, 10–57 PII)

PRESS [*Next Item*] to program another line

PRESS [*Remove*] to unassign ownership

- Procedures #207, #313, #314 and #315—shown in
- square dotted boxes—are not available when the system
- is configured for Key mode.

OLDER VERSION CODES

- #106 PBX Dial Out Code [PII ≥ R4.0], 0-9 [✓ = 9]
- #721 PBX/Centrex Mode [PII ≥ R4.0], 1 = Active, 2 = Not Active ✓
- #722 Reset - Line Assignments [PII ≥ R4.0]
- #723 Button Down Mode [PII ≥ R4.0], 1 = Active, 2 = Not Active ✓

IMPORTANT: In Key mode, the Number of Lines procedure changes Line Assignment (#301), Line Access Restriction (#302), Automatic Line Selection, and Line Ringing to factory settings. To change line assignments without affecting other settings, use Line Assignment (#301).

In Hybrid mode, the Number of Lines procedure changes Pool Line Assignment (#207), Pool Extension Assignment (#314), and Pool Access Restriction (#315) for existing pools back to factory settings. Additionally, it changes Line Assignment (#301), Line Access Restriction (#302), Automatic Line Selection, and Line Ringing for individual lines back to factory settings. To change pool assignments without affecting other settings, use Pool Line Assignment (#207) and Pool Extension Assignment (#314).

System Programming Quick Reference

Place the Programming Overlay on the dial pad of the system display phone at extension 10 or 11

TO START SYSTEM PROGRAMMING

PRESS [Feature] [Δ] [Δ]

PRESS [System Program]

PRESS [System Program]

TO END SYSTEM PROGRAMMING

PRESS [Feature] [Δ] [Δ]

TO USE A SPECIFIC PROCEDURE

DIAL [#] and three-digit procedure code
Example: [#] [1] [Δ] [1] for System Date

TO CYCLE THROUGH SYSTEM PROGRAMMING PROCEDURES

PRESS [Next Procedure] or [Prev Procedure]

NOTE: Procedures #399, #609, and #728—shown below in dashed boxes—are skipped when cycling.

TO CYCLE THROUGH AVAILABLE SETTINGS

PRESS [Next Data.] or [Prev Data.]

TO RETURN TO FACTORY SETTING

PRESS [Remove.]

Extensions

LINE ASSIGNMENT

P+ ≥ R1.0 (p. 5-85)

PII ≥ R1.0 (p. 5-118)

DIAL #301

DIAL an extension number (10-33 P+, 10-57 PII)

To remove all existing line assignments, press [Remove.] before selecting a line.

DIAL a line number (01-12 P+, 01-24 PII)

DIAL 1 = Assigned ✓

2 = Not Assigned

3 = Select Button then

press a programmable button (to assign the line to that button) P+ ≥ R3.0, PII ≥ R1.0

If you use option 3 after a line has been assigned, the line moves from the old button to the new button you select.

PRESS [Next Item.] to program another line for this extension.

To program another extension:

PRESS [Next Procedure.] [Prev Procedure.], enter a new extension number, and repeat above steps

LINE ACCESS RESTRICTION

P+ ≥ R1.0 (p. 5-83)

PII ≥ R1.0 (p. 5-116)

DIAL #302

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL a line number (01-12 P+, 01-24 PII)

DIAL 1 = No Restriction ✓

2 = Outgoing Only

3 = Incoming Only

4 = No Access (line appears on button, but you can use line only to pick up a transferred or held call)

PRESS [Next Item.] to program another line

To program another extension:

PRESS [Next Procedure.] [Prev Procedure.], enter a new extension number, and repeat above steps

DISPLAY LANGUAGE

P+ ≥ R1.0 (p. 5-45)

PII ≥ R1.0 (p. 5-76)

DIAL #303

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = English ✓

2 = Spanish

3 = French

PRESS [Next Item.] to program another extension

AUTOMATIC EXTENSION PRIVACY

P+ ≥ R1.0 (p. 5-17)

PII ≥ R1.0 (p. 5-17)

DIAL #304

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Assigned

2 = Not Assigned ✓

PRESS [Next Item.] to program another extension

ABBREVIATED RINGING

P+ ≥ R1.0 (p. 5-4)

PII ≥ R1.0 (p. 5-4)

DIAL #305

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Active (1 ring) ✓

2 = Not Active (repeated ringing)

PRESS [Next Item.] to program another extension

TRANSFER RETURN EXTENSION

P+ ≥ R2.0 (p. 5-149)

PII ≥ R1.0 ≠ R2.0 (p. 5-192)

DIAL #306

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL number of the extension (10-33 P+, 10-57 PII) to which call should return if not answered ✓ Extension transferring call

PRESS [Next Item.] to program another extension

FORCED ACCOUNT CODE ENTRY

P+ ≥ R3.0 (p. 5-58)

PII ≥ R3.0 (p. 5-90)

DIAL #307

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Assigned

2 = Not Assigned ✓

PRESS [Next Item.] to program another extension

DISTINCTIVE RING

P+ ≥ R3.0 (p. 5-46)

PII ≥ R3.0 (p. 5-77)

DIAL #308

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Active ✓

2 = Not Active

PRESS [Next Item.] to program another extension

INTERCOM DIAL TONE

P+ ≥ R3.0 (p. 5-79)

PII ≥ R3.0 (p. 5-111)

DIAL #309

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Regular ✓

2 = Machine

PRESS [Next Item.] to program another extension

AUTOMATIC VMS COVER

P+ ≥ R3.1 (p. 5-20)

PII ≥ R3.0 (p. 5-32)

DIAL #310

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Assigned

2 = Not Assigned ✓

PRESS [Next Item.] to program another extension

EXTERNAL HOTLINE (was EMERGENCY TELEPHONE)

P+ ≥ R3.1 (p. 5-55)

PII ≥ R3.0 (p. 5-87)

DIAL #311

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Assigned

2 = Not Assigned ✓

PRESS [Next Item.] to program another extension

VOICE INTERRUPT ON BUSY

P+ ≥ R3.1 (p. 5-156)

PII ≥ R3.1 (p. 5-200)

DIAL #312

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Assigned

2 = Not Assigned ✓

PRESS [Next Item.] to program another extension

LINE ACCESS MODE

PII ≥ R4.0 (p. 5-115)

DIAL #313

DIAL an extension number (10-57)

DIAL 1 = Pool ✓ all extensions except 10

2 = Key ✓ extension 10 only

POOL EXTENSION ASSIGNMENT

PII ≥ R4.0 (p. 5-154)

DIAL #314

DIAL an extension number (10-57): To remove all existing pool assignments, press [Remove.] before selecting a line.

DIAL a pool access code (880, 881, 882, or 883)

DIAL 1 = Assigned ✓ 880

2 = Not Assigned ✓ 881, 882, 883

3 = Select Button then press a programmable button (auxiliary pools only)

PRESS [Next Item.] to program another pool for this extension.

To program another extension:

PRESS [Next Procedure.] [Prev Procedure.], enter a new extension number, and repeat above steps

POOL ACCESS RESTRICTION

PII ≥ R4.0 (p. 5-152)

DIAL #315

DIAL an extension number (10-57)

DIAL a pool number (880, 881, 882, or 883)

DIAL 1 = No Restriction ✓

2 = Outgoing Only

3 = Incoming Only

4 = No Access

PRESS [Next Item.] to program another pool

To program another extension:

PRESS [Next Procedure.] [Prev Procedure.], enter a new extension number, and repeat above steps

CALL WAITING

P+ ≥ R4.0 (p. 5-30)

PII ≥ R4.0 (p. 5-47)

DIAL #316

DIAL an extension number (10-33 P+, 10-57 PII)

DIAL 1 = Assigned

2 = Not Assigned ✓

PRESS [Next Item.] to program another extension

COPY SETTINGS

P+ ≥ R1.0 (p. 5-35)

PII ≥ R1.0 (p. 5-57)

DIAL #399

DIAL a source extension number

DIAL target extension numbers

SYSTEM RESET – PROGRAMMING SAVED

P+ ≥ R1.0 (p. 5-138)

Pll ≥ R1.0 (p. 5-181)

IMPORTANT: Using this procedure disconnects any active calls but retains system settings. Use it only if the system fails to function correctly after a power failure or down period.

DIAL #728

Dialing Restrictions and Permissions

OUTGOING CALL RESTRICTION

P+ ≥ R1.0 (p. 5-109)

Pll ≥ R1.0 (p. 5-144)

DIAL #401

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL 1 = No Restriction ✓
2 = Inside (intercom) Only
3 = Local (intercom and local) Only

PRESS [Next Item] to program another extension

TOLL CALL PREFIX

P+ ≥ R1.0 (p. 5-143)

Pll ≥ R1.0 (p. 5-186)

DIAL #402

DIAL 1 = 0/1 plus Area Code and Number ✓

2 = Area Code and Number Only

SYSTEM PASSWORD

P+ ≥ R1.0 (p. 5-137)

Pll ≥ R1.0 (p. 5-180)

DIAL #403

DIAL four digits to set the password

DISALLOWED PHONE NUMBER LISTS

P+ ≥ R1.0 (p. 5-41)

Pll ≥ R1.0 (p. 5-71)

DIAL #404

DIAL a list number (1-4)

DIAL a list entry (01-10)

To add entry:

DIAL the telephone number (up to 12 digits)

PRESS [Enter]

PRESS [Remove] to remove a list entry

PRESS [Next Item] to program another list entry

To program another list:

PRESS [Next Procedure] [Prev Procedure], enter a new list number, and repeat above steps

DISALLOWED LIST ASSIGNMENTS

P+ ≥ R1.0 (p. 5-40)

Pll ≥ R1.0 (p. 5-70)

DIAL #405

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL a list number (1-4)

DIAL 1 = Assigned
2 = Not Assigned ✓

PRESS [Next Item] to assign another list

To program another extension:

PRESS [Next Procedure] [Prev Procedure], enter a new extension number, and repeat above steps

EMERGENCY PHONE NUMBER LIST

P+ ≥ R1.0 (p. 5-50)

Pll ≥ R1.0 (p. 5-82)

DIAL #406

DIAL a list entry (01-10)

To add entry:

DIAL the telephone number (up to 12 digits)

PRESS [Enter]

PRESS [Remove] to remove a list entry

PRESS [Next Item] to program another list entry

ALLOWED PHONE NUMBER LISTS

P+ ≥ R1.0 (p. 5-9)

Pll ≥ R1.0 (p. 5-9)

DIAL #407

DIAL a list number (1-4)

DIAL a list entry (01-10)

To add entry:

DIAL the telephone number (up to 12 digits)

PRESS [Enter]

PRESS [Remove] to remove a list entry

PRESS [Next Item] to program another list entry

To program another list:

PRESS [Next Procedure] [Prev Procedure], enter a new list number, and repeat above steps

ALLOWED LIST ASSIGNMENTS

P+ ≥ R1.0 (p. 5-8)

Pll ≥ R1.0 (p. 5-80)

DIAL #408

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL a list number (1-4)

DIAL 1 = Assigned
2 = Not Assigned ✓

PRESS [Next Item] to assign another list

To program another extension:

PRESS [Next Procedure] [Prev Procedure], enter a new extension number, and repeat above steps

FORCED ACCOUNT CODE LIST

P+ ≥ R3.1 (p. 5-60)

Pll ≥ R3.1 (p. 5-92)

DIAL #409

DIAL a list entry (01-99)

To add entry:

DIAL the account code (up to 6 digits)

PRESS [Enter]

PRESS [Remove] to remove a list entry

PRESS [Next Item] to program another list entry

CLEAR – SYSTEM RESET – PROGRAMMING NOT SAVED

P+ ≥ R1.0

Pll ≥ R1.0

IMPORTANT: Using this procedure disconnects any active calls and ERASES all system and station programming back to the factory settings.

DIAL #989 or 25327

System Speed Dial Numbers

P+ R1.0-R3.1: 60 SS w/2 Digit Codes 20-79, ≥ R4.0 100 SS w/3 Digit Codes 600-699 (p. 5-139)

Pll R1.0-R3.1: 60 SS w/2 Digit Codes 20-79, ≥ R4.0 100 SS w/3 Digit Codes 600-699 (p. 5-182)

To program a number:

PRESS [Feature] [0] [0] to enter programming mode

PRESS [Feature]

DIAL a three-digit code (600-699)

DIAL the telephone number—up to 28 digits (20 prior to R4.0) including special characters (see page 5-127 P+, 5-164 Pll) To "mark" it (to override restrictions), dial [★] before the telephone number

To program another number, or to change a number, repeat

PRESS [Feature] [0] [0] to exit programming mode

To remove a number:

PRESS [Feature] [0] [0] to enter programming mode

PRESS [Feature]

DIAL the System Speed Dial number's code (600-699)

PRESS [Mic]

To remove another number, repeat

PRESS [Feature] [0] [0] to exit programming mode

✓ = Factory setting

☐ = Button with lights required

≥ R.X.X = Indicates release when feature was first added to system e.g. ≥ R3.0

P+/Pll R4.1

System Programming Quick Reference

Place the Programming Overlay on the dial pad of the system display phone at extension 10 or 11

TO START SYSTEM PROGRAMMING

PRESS [*Feature*] [*0*] [*0*]

PRESS [*System Program*]

PRESS [*System Program*]

TO END SYSTEM PROGRAMMING

PRESS [*Feature*] [*0*] [*0*]

TO USE A SPECIFIC PROCEDURE

DIAL [#] and three-digit procedure code

Example: [*#*] [*1*] [*0*] [*1*] for System Date

TO CYCLE THROUGH SYSTEM PROGRAMMING PROCEDURES

PRESS [*Next Procedure*] or [*Prev Procedure*]

NOTE: Procedures #399, #609, and #728—shown below in dashed boxes—are skipped when cycling.

TO CYCLE THROUGH AVAILABLE SETTINGS

PRESS [*Next Data*] or [*Prev Data*]

TO RETURN TO FACTORY SETTING

PRESS [*Remove*]

Groups

PICKUP GROUP EXTENSIONS

P+ ≥ R1.0 (1 Grp ≤ R2.0) (p. 5-116)
Pll ≥ R1.0 (p. 5-151)

DIAL #501

DIAL a group number (1–4)

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL 1 = Assigned to group
2 = Not Assigned to group ✓

PRESS [*Next Item*] to assign another extension

CALLING GROUP EXTENSIONS

P+ ≥ R1.0 (1 Grp ≤ R2.0) (p. 5-31)
Pll ≥ R1.0 (p. 5-53)

DIAL #502

DIAL a group number (1–4)

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL 1 = Assigned to group
2 = Not Assigned to group ✓

PRESS [*Next Item*] to assign another extension

NIGHT SERVICE BUTTON

P+ ≥ R1.0 (p. 5-105)
Pll ≥ R1.0 (p. 5-140)

DIAL #503

DIAL 1 = Assigned
2 = Not Assigned ✓
3 = Select button *then* press a programmable button (to assign Night Service to that button)

If you use option 3 after a Night Service button has been assigned, the Night Service button moves from the o/d button to the new button you select (P+ ≥ R3.0).

NIGHT SERVICE GROUP EXTENSIONS

P+ ≥ R1.0 (p. 5-107)
Pll ≥ R1.0 (p. 5-142)

DIAL #504

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL 1 = Assigned to group ✓
(P+ R 1.0 only)

2 = Not Assigned to group ✓

PRESS [*Next Item*] to assign another extension

HUNT GROUP EXTENSIONS

P+ ≥ R3.1 (p. 5-77)
Pll ≥ R1.0 (Grp 7 > R3.0) (p. 5-109)

DIAL #505

DIAL a group number (1-6, 7 for VMS)

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL 1 = Assigned to group
2 = Not Assigned to group ✓

PRESS [*Next Item*] to assign another extension

VMS HUNT DELAY

P+ ≥ R3.1 (p. 5-154)
Pll ≥ R3.0 (p. 5-198)

DIAL #506

DIAL 1 = Immediate ✓
2 = Delayed

VMS HUNT SCHEDULE

P+ ≥ R3.1 (p. 5-155)
Pll ≥ R3.0 (p. 5-199)

DIAL #507

DIAL 1 = Always ✓
2 = Day Only
3 = Night Only

Auxiliary Equipment

FAX MACHINE EXTENSIONS

P+ ≥ R1.0 (p. 5-57)
Pll ≥ R1.0 (p. 5-89)

DIAL #601

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL 1 = Assigned
2 = Not Assigned ✓

PRESS [*Next Item*] to identify another extension

MUSIC ON HOLD

P+ ≥ R1.0 (p. 5-103)
Pll ≥ R1.0 (p. 5-138)

DIAL #602

DIAL 1 = Active ✓
2 = Not Active

HOTLINE

P+ ≥ R1.0 (p. 5-75)
Pll ≥ R1.0 (p. 5-107)

DIAL #603

DIAL the hotline extension number (*not* ext. 10, 16, 22, 28, 34, 40, 46, or 52)

DIAL the alerted extension number (*not* the hotline) or [*Z*] [*0*] to paging system (P+ ≥ R3.1)

To remove the hotline and alert:

PRESS [*Remove*]

DOORPHONE 1 EXTENSION

P+ (p. 5-49)
Pll (p. 5-81)

DIAL #604

DIAL an extension number (P+/Pll: 12–15, 18–21, 24–27, 30–33, Pll only: 36-39, 42-45, 48-51, or 54-57)

To remove the doorphone extension:

PRESS [*Remove*]

DOORPHONE 2 EXTENSION

P+ ≥ R1.0 (p. 5-49)
Pll ≥ R1.0 (p. 5-81)

DIAL #605

DIAL an extension number (P+/Pll: 12–15, 18–21, 24–27, 30–33, Pll only: 36-39, 42-45, 48-51, or 54-57)

To remove the doorphone extension:

PRESS [*Remove*]

DOORPHONE ALERT EXTENSIONS

P+ ≥ R1.0 (p. 5-48)
Pll ≥ R1.0 (p. 5-80)

DIAL #606

DIAL an extension number (except a doorphone extension)

DIAL 1 = Not an alert ✓
2 = Doorphone 1 alert
3 = Doorphone 2 alert
4 = Doorphones 1 and 2

PRESS [*Next Item*] to identify another extension (Pll ≥ R3.0 = 48, P+ ≥ R3.0 = 24, all previous releases = 5 alert extensions per doorphone)

AA EXTENSIONS

P+ ≥ R2.0 (p. 5-3)
Pll ≥ R1.0 (p. 5-3)

DIAL #607

DIAL an extension number (10-33 P+, 10-57 Pll)

DIAL 1 = Assigned
2 = Not Assigned ✓

PRESS [*Next Item*] to assign another extension

SMDR RECORD TYPE

P+ ≥ R3.0 (p. 5-128)
Pll ≥ R1.0 (p. 5-170)

DIAL #608

DIAL 1 = All calls ✓
2 = Outgoing calls only

SMDR TOP OF PAGE

P+ ≥ R3.0 (p. 5-129)
Pll ≥ R1.0 (p. 5-172)

DIAL #609

SMDR OUTPUT FORMAT

P+ ≥ R4.1 (p. 5-127)
Pll ≥ R4.1 (p. 5-169)

DIAL #610

DIAL 1 = 15 digits ✓
2 = 24 digits

SMDR TALK TIME

Pll ≥ R4.1 (p. 5-171)

DIAL #611


DIAL 1 = Active
2 = Not Active ✓

✓ = Factory setting

 = Button with lights required

≥ RX.X = Indicates release when feature was first added to system e.g. ≥ R3.0

Programming Mixed Telephone Types

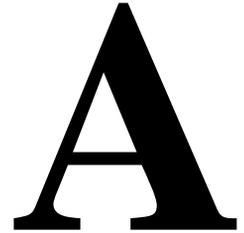

Overview

This appendix provides information about programming from a PARTNER-34D phone to MLS-model phones and from an MLS-34D phone to PARTNER-model phones. In these situations, you should be aware that the button that you press at extension 10 or 11 (the programming extension) is likely to be in a different location than the button on the phone to which the programming applies (the target phone). If you are programming from a PARTNER-18D or MLS-18D phone, the button locations are the same.

You can use the illustrations in this appendix to facilitate programming from one telephone type to the other. Figure 1 shows the buttons on the PARTNER-34D Programming Overlay and the relative location of those buttons on each MLS-model phone. Figure 2 shows the buttons on the MLS-34D Programming Overlay and the relative location of those buttons on each PARTNER-model phone. (The letters on the PARTNER-34D Overlay in Figure 1 are printed on the Overlay. To help you program from an MLS-34D phone, you may want to write the letters shown on the MLS-34D Overlay in Figure 2 on your Overlay.)

If you want to program features on specific buttons at target phones, it is recommended that you:

1. Look at the figure with the overlay that matches the phone at your programming extension.
2. Find the location of the button in the picture of the target phone.
3. Note the letter associated with that particular button.
4. Find the letter in the picture of the Programming Overlay.
5. Press that button on the programming extension.

For example, if you are using a PARTNER-34D phone at extension 10 and you want to program Do Not Disturb on the top, leftmost button of an MLS-18D phone: refer to Figure 1; find the top, leftmost button on the MLS-18D phone; then press the button labeled M on the PARTNER-34D Programming Overlay.

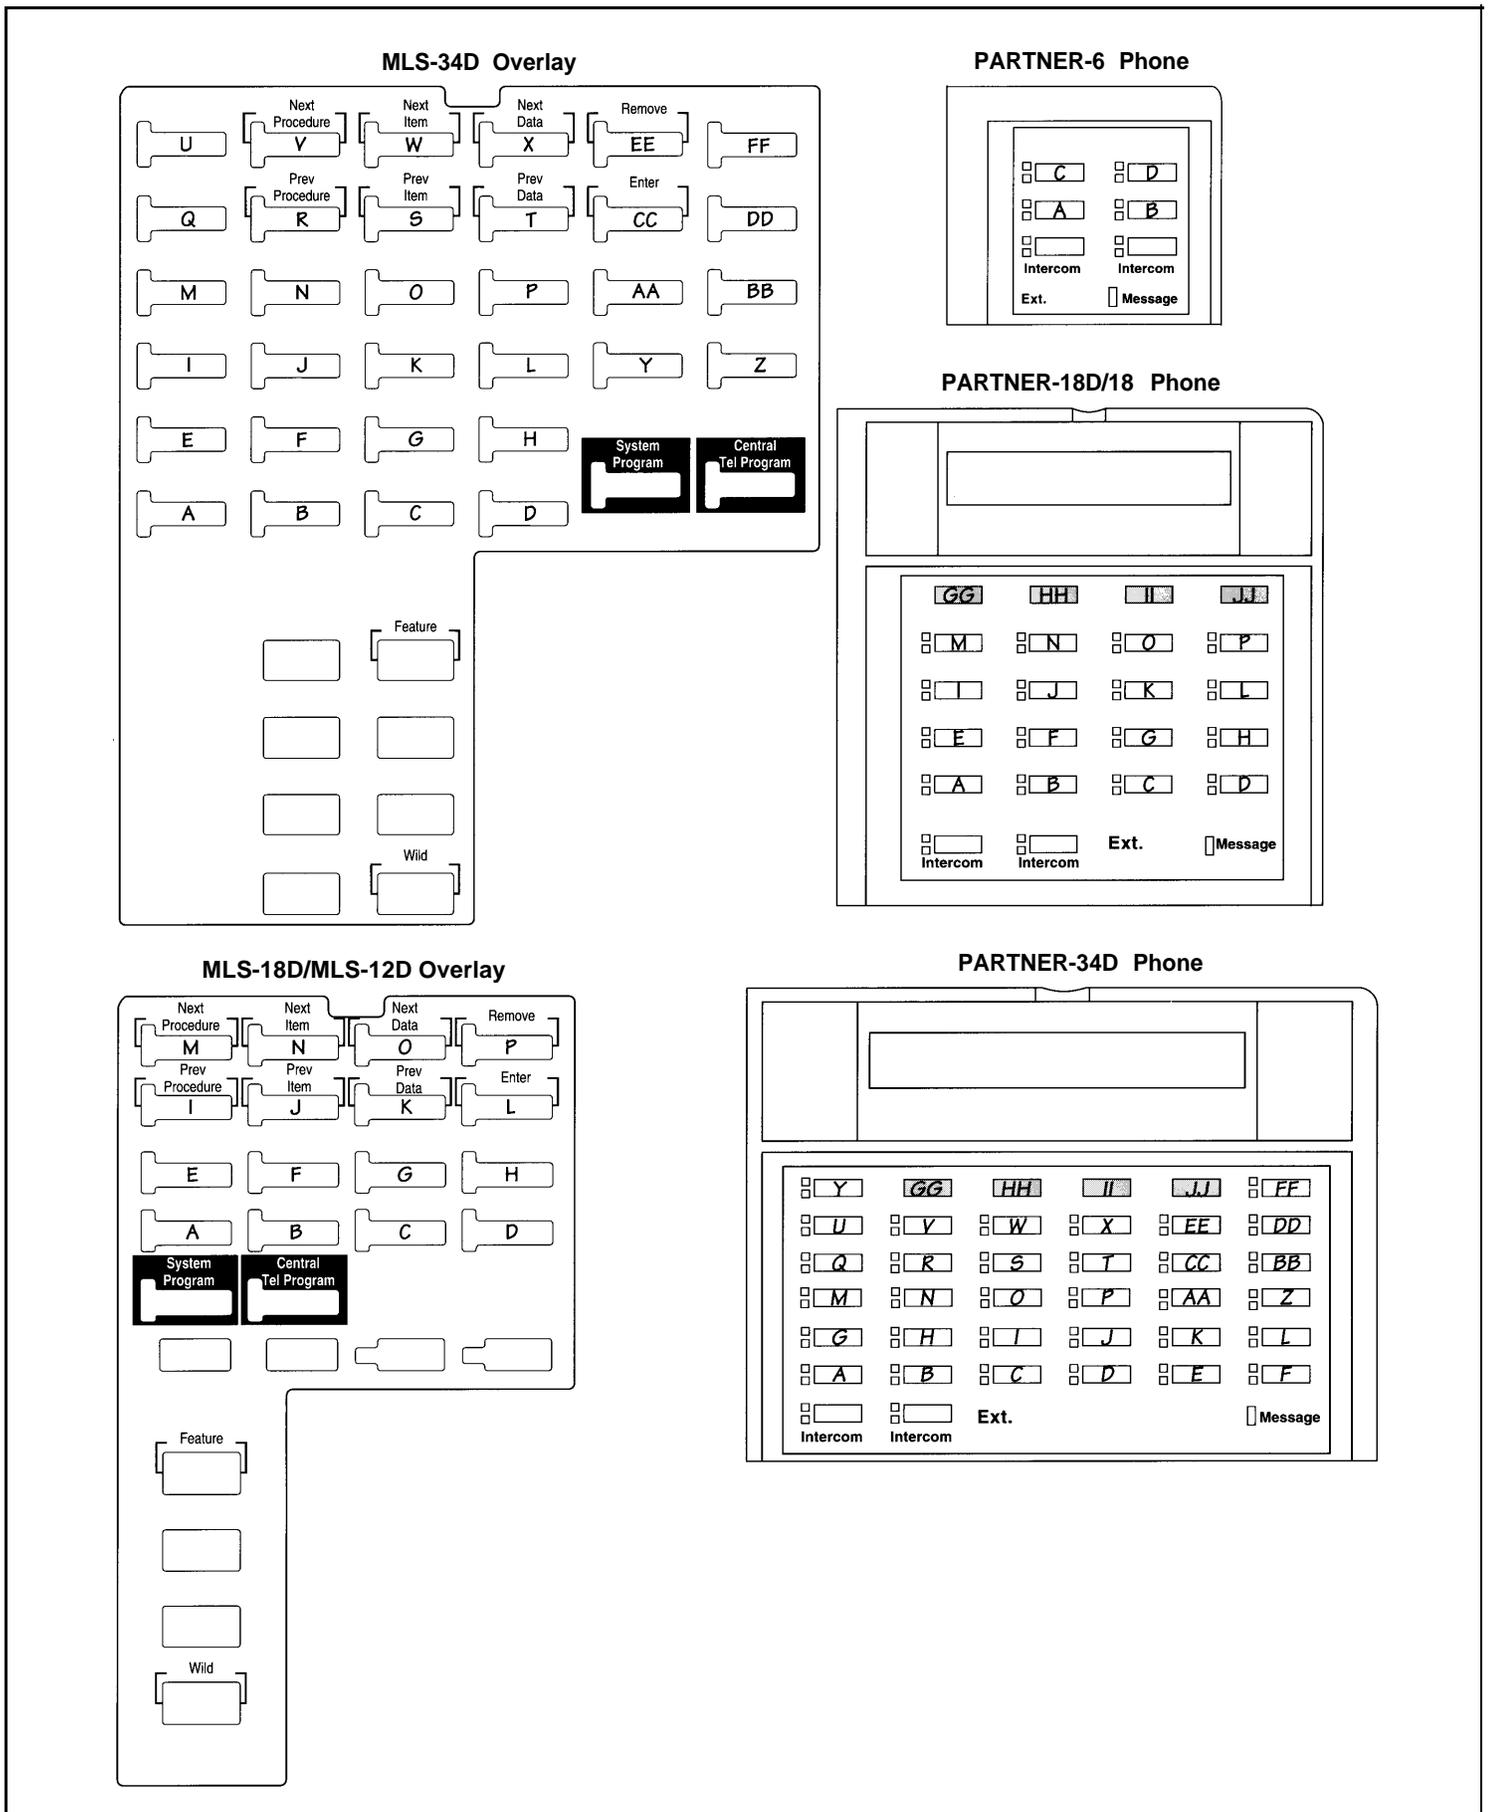


Figure 2. Programming from a MLS-34D Phone

