

# DATA STAR™

## DATASET ADDENDUM

---



- TIEUG-019



TIE / communications, Inc.  
8 Progress Drive, Shelton, CT 06484

Part No. 01501 DSD  
Issue H

September 1987  
Printed in U.S.A.  
009020000

---

Nothing contained in this handbook shall be deemed to be, and this handbook **does not constitute**, a warranty of, or representation with **respect** to, any of the equipment **covered**. This handbook is **subject** to change without notice and TIE/communications, Inc. has no **obligation to provide** any updates or corrections to this handbook. **Further**, TIE/communications Inc., also reserves the right, without prior notice, to make changes in equipment design or components as it deems appropriate. No representation is made that this handbook is complete or accurate in all respects and TIE/communications, Inc. shall not be liable for any errors or omissions. In no event shall TIE/communications, Inc. be liable for any incidental or consequential damages in connection with the use of this handbook. This document contains proprietary information that is protected by copyright. All rights **are** reserved. No part of this document may be **photocopied** or reproduced without the prior written consent of TIE/communications, Inc.

01986 by TIE/communications, Inc. All Rights Reserved.

Data Star is a trademark of TIE/communications, Inc.

## OUTSIDE CALLS

### VOICE CALL:

#### PLACE

Lift handset. Dial access code for outside line or press a line key. Dial telephone number.

#### ANSWER

Lift handset. Press flashing line key if necessary.

### DATA CALL:

#### PLACE


Press data key. Dial access code for an outside line or press a line key. Dial telephone number. Dial "\*" for a BAUD rate of 1200. (300 BAUD is used if a "\*" is not dialed.)

#### ANSWER (DATA ORIGINATED CALL)

No action is required

#### ANSWER (VOICE ORIGINATED CALL)

Lift handset. Press flashing line key if necessary. Press data key.

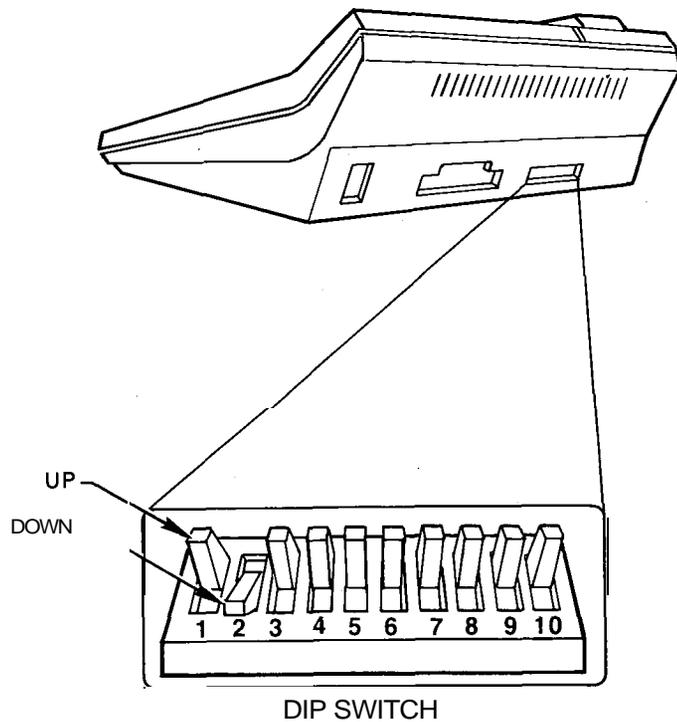

## INTERCOM CALLS

### VOICE CALL:

PLACE (RINGING)  
(VOICE)

Lift handset. Dial extension number.  
Lift handset. Press VOICE CALL.  
Dial extension number.

ANSWER (RINGING)  
(VOICE)

Lift handset.  
Voice reply (if programming permits)  
or  
Lift handset.

### DATA CALL:

PLACE (DATA  
ORIGINATED CALL)

Press data key. Dial extension number.

PLACE (VOICE  
ORIGINATED CALL)

Lift handset. Dial extension number. When called party answers, either party must press data key. Hang up.

ANSWER (DATA  
ORIGINATED CALL)

No action is required.

ANSWER (VOICE  
ORIGINATED CALL)

Voice reply (if programming permits)  
or  
Lift handset. Either party must press data key. Hang up.

## SWITCH SETTINGS, DATASET

SWITCH	NAME	SETTINGS
1	NON-INTERACTIVE	D NON-INTERACTIVE MODE ENABLED, INTERACTIVE MODE DISABLED
	INTERACTIVE	U INTERACTIVE MODE AND NON-INTERACTIVE MODE ENABLED.
2	ECHO	D ON U OFF
3	RS-232-C CONTROLS ENABLE	D DISABLED U ENABLED
4,5,6	BAUD RATE (1 STOP BIT)	SETTING      RATE
		DDD          SLAVE
		DDU          300
		DUD          1200
		DUU          1800
		UDD          2400
		UDU          4800
		UUD          9600
		uuu          19,200
		7,8
DD          EVEN, 7 BITS		
DU          ODD, 7 BITS		
UD          TRANSPARENT, 8 BITS, NO PARITY		
uu          NOT DEFINED		
9	DTR LOW DISCONNECT	D DISABLED U ENABLED
10	BREAK DISCONNECT	D DISABLED U ENABLED

## SPEED DIAL

### INDIVIDUAL:

#### PROGRAM

Lift handset. Dial "#". Press a programmable key designated for SPEED DIAL or dial a two-digit code. Dial outside line code or press line key. Dial telephone number up to 16 digits in length including pauses (entered by pressing HOLD/MOH).

#### PLACE

Lift handset. Dial SPEED DIAL code  
or  
Press data key. Dial SPEED DIAL code  
or  
Press key that is programmed as a SPEED DIAL key.

### SYSTEM:

#### PLACE

Lift handset. Dial SPEED DIAL code  
or  
Press data key. Dial SPEED DIAL code.

## SIMULTANEOUS VOICE/DATA CALLS

### VOICE CALL (WHILE ON DATA CALL):

#### PLACE

Place Intercom or outside call in normal manner

#### ANSWER

Answer Intercom or outside call in normal manner

### DATA CALL (WHILE ON VOICE CALL):

#### PLACE

Put present call on HOLD. Hang up. Place data call in normal manner. When data call is established, return to call on HOLD.

#### ANSWER (VOICE ORIGINATED CALL)

Put present call on HOLD. Answer incoming data call in normal manner. When data call is established, return to call on HOLD.

#### ANSWER (DATA ORIGINATED CALL)

No action is required

---

---

## CALL WAITING (CAMP-ON)

### PLACE

Upon busy signal, dial "2". Do not hang up. Call is completed when called party becomes available.

## CALL BACK/LINE QUEUING

### PLACE

Upon busy signal, dial "1". After dial tone is heard, hang up. CALL BACK is signified by a long ring. Upon CALL BACK, lift handset. Calls are automatically completed if any of the following are used: , LEAST COST ROUTING, SPEED DIALING, LAST NUMBER REDIAL, OR SAVE NUMBER REDIAL. All calls, either voice or data, are treated as voice calls upon call back. Voice calls can be converted to data calls at this time, however.