
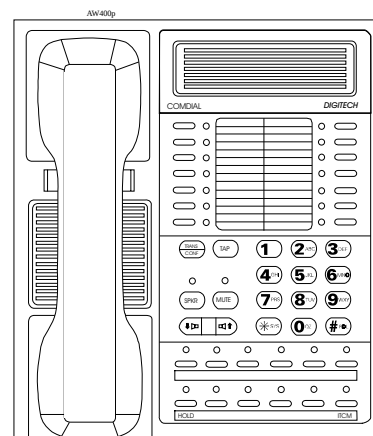


COMDIAL®

**DXP, DXP *Plus*, and FX Series
Digital Communications System**

**Non-LCD Multi-line Telephone
Reference Manual**

IMPRESSION

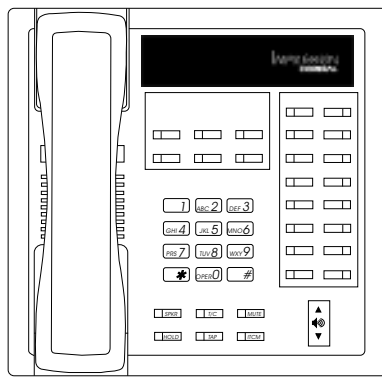


DIGITECH

This manual is applicable to the DigiTech models 7714S-** and 7714X as well as the Impression models 2122S-** and 2122X-** non-LCD telephones when used with the following digital communications systems:

DXP with Software Revision 9C
DXP or DXP *Plus* with Software Revision 11A and later

FX Series with Software Revision 12A and later

NOTE: "S" in the model number means Speakerphone and "X" means Monitor Telephone.

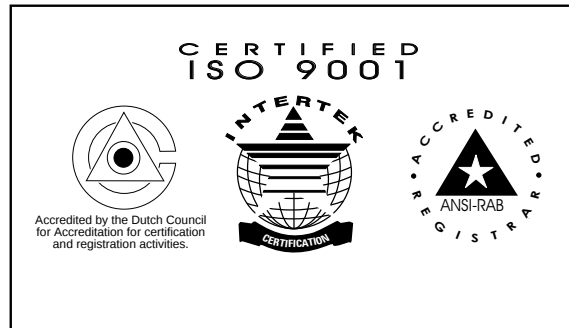

*Comdial's Quality Management System Is
Certified To The ISO 9001 Standard.*

Comdial® strives to design the features in our communications systems to be fully interactive with one another. However, this is not always possible, as the combinations of accessories and features are too varied and extensive to insure total feature compatibility. Accordingly, some features identified in this publication will not operate if some other feature is activated.

Comdial® disclaims all liability relating to feature non-compatibility or associated in any way with problems which may be encountered by incompatible features. Notwithstanding anything contained in this publication to the contrary, Comdial makes no representation herein as to the compatibility of features.

Contents

1	Introducing The Telephone.	1-1
1.1	Using This Guide	1-1
1.2	Using Your Speakerphone	1-2
1.3	Knowing Your Station's Functions	1-5
1.4	Understanding What The Lights Mean	1-8
2	Answering Calls.	2-1
2.1	Using Chapter Two	2-1
2.2	Answering Outside Calls	2-2
2.3	Answering Intercom Calls	2-2
2.4	Answering Calls At Monitored Stations	2-3
2.5	Answering Night Transferred Calls	2-4
2.6	Making A Call Pick-Up	2-5
2.7	Responding To A Subdued Off-Hook Voice Announcement	2-6
3	Making Calls.	3-1
3.1	Using Chapter Three	3-1
3.2	Dialing Automatically	3-2
3.3	Dialing Manually	3-3
3.4	Redialing A Previously Dialed Number	3-4
3.5	Using Line Groups	3-6
3.6	Waiting For A Line (Queuing)	3-7
3.7	Making Intercom Calls	3-8
3.8	Camping On At A Busy Station And Waiting For An Automatic Callback	3-10
3.9	Camping On At An Idle Station And Waiting For An Automatic Callback	3-11
3.10	Camping On At A Busy Station And Waiting For An Answer (Call Waiting)	3-12
3.11	Overriding A Call Or A Do Not Disturb Condition At Another Telephone	3-13
3.12	Making A Subdued Off-Hook Voice Announcement	3-14
4	Placing Calls On Hold.	4-1
4.1	Using Chapter Four	4-1
4.2	Holding Calls	4-2

4.3	Handling Hold Recalls.....	4-4
4.4	Parking Calls.....	4-5
4.5	Handling Park Recalls	4-6
5	Transferring Calls.....	5-1
5.1	Using Chapter Five	5-1
5.2	Transferring Calls—Screened	5-2
5.3	Transferring Calls—Unscreened	5-3
5.4	Making A Hot Transfer.....	5-4
5.5	Transferring Calls Using Quick Transfer	5-5
6	Conferencing Calls	6-1
6.1	Using Chapter Six.....	6-1
6.2	Conferencing Telephones Together	6-2
7	Using The Other Telephone Features	7-1
7.1	Using Chapter Seven.....	7-1
7.2	Blocking Voice Announce Calls	7-2
7.3	Diverting Incoming Calls To Another Station....	7-2
7.4	Entering Account Codes	7-3
7.5	Entering Authorization Codes	7-4
7.6	Forwarding Calls.....	7-6
7.7	Identifying Your Telephone With Automatic Set Relocation	7-7
7.8	Listening To A Call Over The Telephone Speaker (Group Listening)	7-8
7.9	Making A Call Non-Private (Privacy Release)	7-9
7.10	Monitoring A Conversation Between Two Telephones (Service Observing).....	7-10
7.11	Muting Your Telephone.....	7-11
7.12	Sending A Paging Announcement	7-12
7.13	Setting A Do Not Disturb Condition At Your Station.....	7-14
7.14	Setting The Volume Control	7-16
7.15	Setting Your Personal Ring Tones.....	7-18
7.16	Switching The Dialing Mode Between Pulse And Tone	7-19
7.17	Using Background Music	7-19
7.18	Using Direct Inward System Access (DISA) ...	7-20
7.19	Using The Tracker Paging System	7-23
7.20	Using E and M Tie Lines	7-26
7.21	Using Call Forward Outside System (CFOS) ..	7-28

8	Sending And Receiving Non-Verbal Messages	8-1
8.1	Using Chapter Eight	8-1
8.2	Lighting The Message Waiting Light	8-2
8.3	Sending Messages To LCD Speakerphones	8-4
8.4	Sending Response Messages	8-6
9	Programming Your Telephone	9-1
9.1	Using Chapter Nine	9-1
9.2	Programming For Speed Dialing.....	9-2
9.3	Storing Speed Dial Numbers	9-4
9.4	Storing DSS Numbers.....	9-5
9.5	Storing The Feature Buttons.....	9-6
9.6	Storing The Response Message Button.....	9-9
10	Troubleshooting Your Telephone	10-1
	Glossary	G-1
	Index	I-1
	Quick Reference Guide.....	A-1

This page remains blank intentionally.

1

Introducing The Telephone

The Impression and DigiTech multi-line telephones consist of two models—the speakerphone model and the monitor model. The monitor model can be used for receiving speakerphone calls and for answering a call announcement. When making calls with this model, you must use the handset for delivering your verbal messages. The operating instructions in this manual, while mainly for the speakerphone, also apply to the monitor telephone with the few noted exceptions that apply when making speakerphone calls.

Although there are minor differences in physical appearance between the Impression and DigiTech telephones, there are no functional differences between them.

1.1 Using This Guide

This comprehensive user's guide describes your speakerphone (or monitor telephone) and tells you how to use it.

The sections in this introductory chapter help you become familiar with your speakerphone's controls and indicators. The remaining sections are titled

- 1.2 Using Your Speakerphone
- 1.3 Knowing Your Speakerphone's Functions
- 1.4 Understanding What The Lights Mean

The operation chapters define often-used features and provide instructions for their use. These chapters are titled

- 2 Answering Calls**
- 3 Making Calls**
- 4 Placing Calls On Hold**
- 5 Transferring Calls**
- 6 Conferencing Calls**

The special-purpose features of the telephone are grouped into one chapter titled

- 7 Using The Other Telephone Features**

Your telephone provides several non-verbal ways to communicate using lights and indicators. The descriptions of these methods are provided in a separate chapter titled

8 Sending And Receiving Non-Verbal Messages

You can program many of the buttons on your telephone to enhance the unit's versatility and usability. These programming instructions are found in the chapter titled

9 Programming Your Telephone

For your convenience, a troubleshooting chart, a quick reference guide, and a glossary are included in the chapter titled

10 Troubleshooting Your Telephone

1.2 Using Your Speakerphone

NOTE: The instructions in this section do not apply to the monitor telephone.

When using your speakerphone, the microphone and loudspeaker are farther away from you than when you use a handset. Both the signal from the loudspeaker and the signal to the microphone must be strengthened. When microphones and loudspeakers are close together (such as in a speakerphone), additional amplification typically generates a ringing sound (public address systems do this if the volume is too high or the microphone is too close to a loudspeaker).

Your speakerphone's sound-activated switches allow either the microphone or the loudspeaker to be on at a given time. This means that voice sounds travel in only one direction at a particular moment.

Speakerphone User Guidelines

- Both parties cannot talk at the same time. You must wait for silence out of your loudspeaker before talking. You must stop talking to hear the other party.
- Background noise may prevent the sound-activated switches from operating properly. Avoid placing the speakerphone where it will detect sounds from typewriters, keyboards, printers, paging systems, and other equipment.

- Speak slightly louder than normal and with a clear, authoritative voice. For the microphone to best detect your voice, speak within three feet of it and face the telephone.
- Raising the volume of the loudspeaker makes it easier for the sound-activated switches in your telephone to select the distant party's voice. Lowering the volume of the loudspeaker makes it easier for the switches to select your voice.
- Since the system takes several seconds to provide the best switching, constant sound patterns—such as elongating your words and playing externally-supplied music—may prevent the sound-activated switches from operating properly.
- Place the telephone on a hard surface and away from table edges. Do not place the telephone in corners or enclosures. Do not let obstructions come between you and the microphone. Rooms with hard, flat surfaces that reflect sound may affect the sound-activated switches.
- If you are using a handset and the other party is using a speakerphone, avoid breathing heavily into your microphone. Avoid other sounds that may affect the distant telephone's sound-activated switches.
- In some situations, such as when either you or the distant party are in a noisy environment, you may have to lift your handset to ensure a clear conversation.
- When both you and the distant party use speakerphones, the sound-activated switches can occasionally detect both voices simultaneously, thus blocking out both voices.

- **To manually place a call using your speakerphone,**
 1. Press the **INTERCOM** or line button.
 2. Dial the number.
 3. When party answers, speak toward the telephone.
- **To manually place a call using your monitor telephone,**
 1. Press the **INTERCOM** or line button.
 2. Dial the number.
 3. When party answers, lift the handset to speak.
- **To automatically dial a number using your speakerphone,**
 1. Press the preprogrammed speed dial or DSS button and speak toward the telephone when your party answers.
- **To automatically dial a number using your monitor telephone,**
 1. Press the preprogrammed speed dial or DSS button and lift the handset to speak when your party answers.
- **To answer a call with your speakerphone,**
 1. Press the **INTERCOM** or line button with flashing red or orange light.
 2. Speak toward the telephone to answer the call.
 3. To end a call with your speakerphone, just press the **SPEAKER** button.
- **To answer a call with your monitor telephone,**
 1. Press the **INTERCOM** or line button with flashing red or orange light.
 2. Lift the handset to answer a call.
 3. Hang up the handset to end a call.

1.3 Knowing Your Station's Functions

Your speakerphone (or monitor telephone) provides many versatile features for your use. These features are explained in terms of what they allow you to do. Refer to section 1.4 *Understanding What The Lights Mean* for information about the lights associated with your station's buttons.

Hold Button

- Places a line on hold
- Stores pauses in number sequences during programming

Intercom Button

- Selects an intercom path
- Allows you to initiate many of the telephone's features

Message-Waiting Light (located beside the Hold button)

- Indicates that a message awaits pick up

Microphone Opening (Speakerphone Model Only)

- Allows hands-free operation of speakerphone (speak clearly toward microphone opening)

Mute Button

- Keeps the person on the line from hearing your conversation

Programmable Buttons

- Allow you to store numbers for automatic dialing functions
- Allow you to store telephone extension numbers for Direct Station Selection (DSS)
- Indicate which lines are either in use, ringing, or on hold

Speaker

- Sounds distant party's voice
- Sounds ringing and call-in-progress tones

Speaker Button

- Turns your speaker on or off
- Disconnects a call when you are on a handsfree call
- Ends or cancels programming

TAP Button


- Recalls dial tone or generates a hookflash
- Retrieves held calls or last call placed on hold

Transfer/Conference Button


- Transfers calls
- Sets up conference calls

Volume Control (Rocker Switch)

- Regulates the volume of the ringer, speaker, handset, headset, background music, and group listening mode

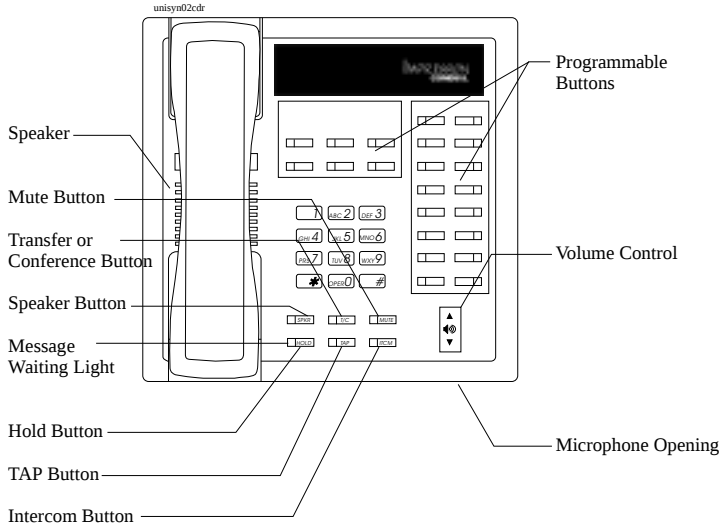

Impression Non-LCD Speakerphone

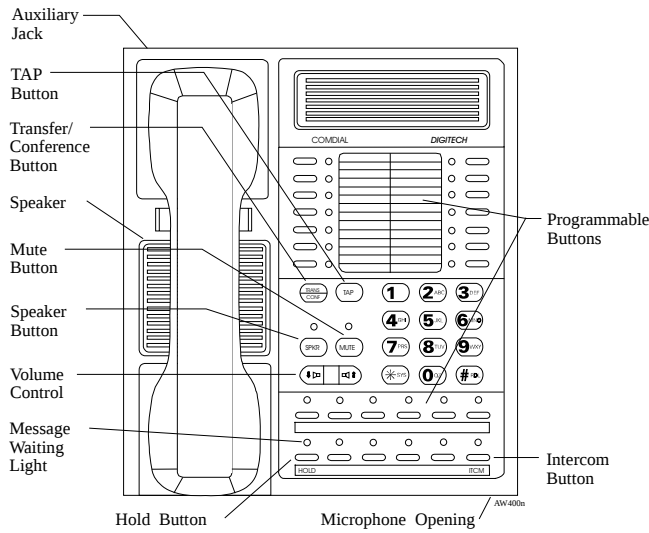

DigiTech Non-LCD Speakerphone

1.4 Understanding What the Lights Mean

The lights (LEDs) on your speakerphone, or monitor telephone, indicate the status of lines, features, and intercoms.

Next to a Direct Station Select (DSS) button:

- Steady red = station is in use.
- Flashing red = station is receiving a call.
- Winking red = message-waiting light set for you by station associated with that DSS button.

Next to a line button:

- Steady green with a quick flash = this is your line, either on-hook (in a handsfree mode) or off-hook, when the line is active.
- Steady red = another station is using this line.
- Flashing red = a call is coming in on this line.
- Flashing orange = this line will be answered when you lift the handset.
- Winking green = your line is on hold.
- Winking red = the call has been placed on hold by another station.
- Fluttering orange = your line has recalled from hold.
- Fluttering red = the line put on hold by another station has recalled.

Next to a fixed feature or programmable feature button:

- Steady red = the feature is on.
- Steady off = the feature is off.

Next to an intercom button:

- Steady green with a quick flash = you are using your intercom.
- Winking red = a message is set on your telephone for others to receive when calling.
- Flashing orange = someone is calling your extension or a call is being transferred to you.

Beside the HOLD button:


- Fast flashing red = message awaits pick up.
- Winking green = a line is on hold at your station.


Beside the SPEAKER button:

- On steady (with the telephone on hook and busy) = speakerphone mode is active.
- On steady (with telephone on hook and idle) = background music is turned on.
- Flashing = feature programming is in progress.

Beside the MUTE button:

- On steady = called party cannot hear your conversation.

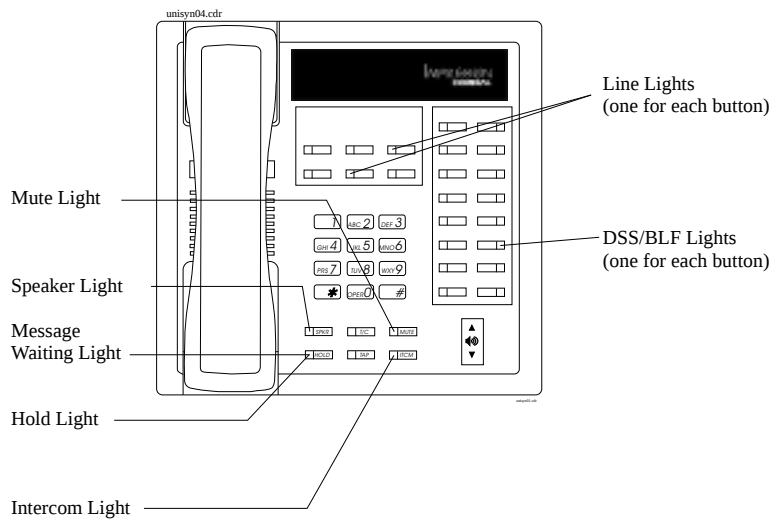**Lights On The Impression Model**

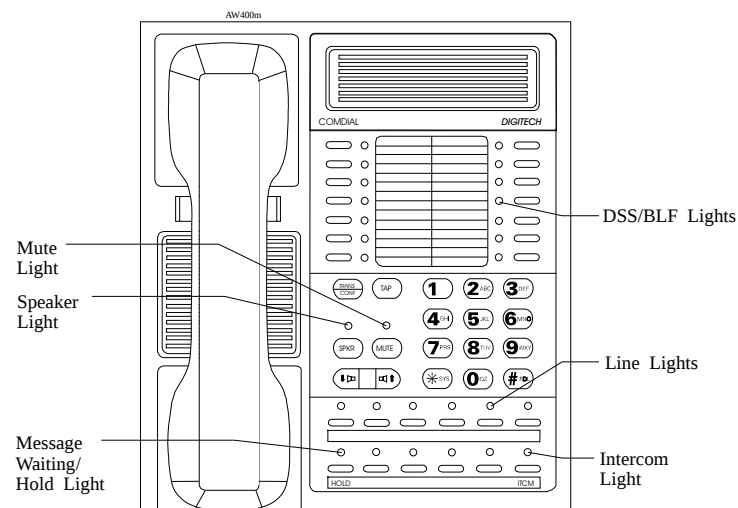

Lights On The DigiTech Model

2**Answering Calls****2.1 Using Chapter Two**

Use the information that you find in this chapter to learn the various ways that you can use your speakerphone, or monitor telephone, to answer calls to your station.

- 2.2 Answering Outside Calls
- 2.3 Answering Intercom Calls
- 2.4 Answering Calls At Monitored Stations
- 2.5 Answering Night Transferred Calls
- 2.6 Making A Call Pick-Up
- 2.7 Responding To A Subdued Off-Hook
Voice Announcement

2.2 Answering Outside Calls

A call that rings on an outside line will sound long, single-tone bursts and will light the line status light. If the installer enabled ringing line preference at your station, an orange light flashes next to the line that your station will answer when you lift the handset; a red light will flash for any other ringing line.

- **When you hear outside ringing and observe a flashing light, answer the call as follows:**

1. Lift handset or, press line button and speak toward telephone if light is orange (speakerphone only),
—OR—
press button of ringing line if flashing light is red, and speak toward the telephone (speakerphone only). Lift handset if privacy is desired or if you have a monitor telephone.

2.3 Answering Intercom Calls

An intercom call is one that is made from one system telephone to another. An intercom party can voice-announce through your speaker instead of ringing your telephone, or an intercom party can ring your telephone (intercom ringing sounds two short ring bursts).

You can block voice-announce calls if you wish. See the discussion titled *Blocking Voice Announce Calls* for details.

- **When you hear intercom ringing followed by a caller's voice,**

1. Speak toward the telephone to answer, or lift handset if privacy is desired. You can also use this hands-free answer-back method on the monitor telephone.

- **When you hear intercom ringing (two short ring bursts),**

1. Press **INTERCOM** and speak toward telephone; lift handset if privacy is desired or you have a monitor telephone.

2.4 Answering Calls At Monitored Stations

Your telephone may have the personal intercom number of another telephone appearing at a button location. You can use the light associated with this button to monitor the status of that telephone, and you can press the button to make a call to that telephone if you wish. The associated light is known as the Busy Lamp Field (BLF) light, and the button is known as the Direct Station Select (DSS) button.

If the installer arranged for your telephone to have the station monitoring feature, the BLF light shows activity status at the monitored telephone. Also, your telephone may include a **DSS STATUS** button. If it does, you can use it to switch from monitoring all telephone activity to just monitoring its personal intercom activity.

- **To monitor another telephone,**

1. Observe the BLF light indications next to the personal intercom appearance (DSS) button:
Off= idle
Flashing= ringing
On= busy or on hold

NOTE: If you do not have the station monitoring feature, the BLF light shows just the following information:
Off = idle,
On = busy.

- **To call an idle monitored station or to answer one that is ringing,**

1. Note the BLF light condition.
2. Press assigned DSS button.
3. Lift the handset to talk.

NOTE: If you place this call on hold or if you transfer it to another telephone, the BLF light flashes a hold signal. You can retrieve the call by pressing TAP.

2.5 Answering Night Transferred Calls

The system attendant can transfer incoming calls to a particular station or stations for off-hour ringing. Additionally, the installer can program the system for night-answer zones (up to four) with a loud bell associated with each zone. The loud bell sounds when the night transfer of ringing feature directs incoming calls to a zone. The installer may choose different night-answer dialing codes than those default values detailed in this procedure. When in doubt, ask your system attendant what codes are active at your site.

- **If your telephone rings,**
 1. Press line button with flashing light.
 2. Lift handset to talk.
- **When you hear loud ringing anywhere in the system,**
 1. Lift handset.
 2. Press **INTERCOM**.
 3. Dial **65** through **68** to select ringing zone (1-4) that the bell is in,
—OR—
dial **69** to answer any ringing zone.

***Note:** This feature is known as **Trunk Access From Any Station (TAFAS)**.*

2.6 Making A Call Pick-Up

Often, the installer arranges several telephones together in a user group. If your telephone is so arranged, you can answer calls that are ringing at other stations within your particular group. Also, you can answer a call that is ringing at any telephone in the system if you know the telephone's extension number.

- **To answer a call that is ringing within your group,**
 1. Press **INTERCOM**.
 2. Dial # **4**.
 3. Speak toward telephone to answer call. Lift handset if privacy is desired or you have a monitor telephone.
- **To answer a call that is ringing at any telephone in the system,**
 1. Press **INTERCOM**.
 2. Dial * **4**.
 3. Dial extension number of ringing telephone.
 4. Speak toward telephone to answer call. Lift handset if privacy is desired or you have a monitor telephone.

If you have programmed a **PICK UP** button on your telephone (see "Storing The Feature Buttons" in the chapter titled *Programming Your Telephone* in this guide), you may make a call pick-up (either within your group or at a specific station inside or outside your group) using that button.

- **To answer a call ringing at any other station in your group,**
 1. Press preprogrammed group **GPKUP** button.
- **To answer a call ringing at a specific station (either inside or outside your group),**
 1. Press preprogrammed direct **DPKUP** button.
 2. Press DSS or dial extension of ringing telephone.

2.7 *Responding To A Subdued Off-Hook Voice Announcement*

Your installer can set your speakerphone to receive a Subdued Off-Hook Voice Announcement (SOHVA). This feature allows an intercom caller to break into your call by making an announcement through your handset receiver. (This means that if you are on a speakerphone call, you cannot receive a SOHVA call.)

Please note that you can receive a SOHVA call even if you are using your headset; however, the distant party may be able to hear the SOHVA as it is made.

- **You can respond to a SOHVA in one of two ways:**
 1. **Verbally:** Press and hold the **MUTE** button and speak into handset. Distant party cannot hear response. To return to distant party after your reply is complete, release the **MUTE** button.
 2. **Non-verbally (Response Messaging):** If the announcing station has an LCD speakerphone, press a preprogrammed **RESPONSE MESSAGE (RSP)** button to cause a message to appear in the display of the telephone making the SOHVA call and then that telephone is automatically disconnected from your telephone. (If the telephone to which you attempt to send a non-verbal message is not an LCD telephone, no message is sent and that station is immediately disconnected from the call.)

3**Making Calls****3.1 Using Chapter Three**

Your speakerphone or monitor telephone provides different methods for making calls. Use this chapter to understand how to make calls from your station.

- 3.2 Dialing Automatically
- 3.3 Dialing Manually
- 3.4 Redialing A Previously Dialed Number
- 3.5 Using Line Groups
- 3.6 Waiting For A Line (Queuing)
- 3.7 Making Intercom Calls
- 3.8 Camping On At A Busy Station And
Waiting For An Automatic Callback
- 3.9 Camping On At An Idle Station
And Waiting For An Automatic Callback
- 3.10 Camping On At A Busy Station
And Waiting For An Answer (Call Waiting)
- 3.11 Overriding A Call Or A Do Not Disturb
Condition At Another Telephone (Executive Override)
- 3.12 Making a Subdued Off-Hook Voice Announcement

3.2 Dialing Automatically

This feature provides one- or two-button speed dialing using programmable buttons at which you have previously stored numbers. Two levels of number storage are available at each storage location, and you can use one or both levels as needed. Further, since you usually store a line choice as part of a speed dial number, line selection is automatic with speed dialing. This manual discusses button programming in a separate section. Refer to it when you are ready to store numbers at the programmable buttons.

There are two types of speed dial numbers: (1) numbers that you store for your own use (personal speed dial numbers), and (2) numbers that the system attendant stores for everyone's use (system speed dial numbers).

- **To automatically dial a speed dial number stored at one of the programmable buttons on your station,**

1. Press preprogrammed speed dial button (line selection is usually a part of the stored speed dial number),

—OR—

press **HOLD** button, then press preprogrammed button (to choose number stored as a second choice at that button).

With your station idle, you can automatically dial a personal or system speed dial number that is stored at a dial pad location.

- **To speed dial a number stored at the dial pad,**

- *personal speed dial number*—while on hook, press speed dial number on dial pad (**0–9**),
- *system speed dial number*—while on hook, press * and then dial system speed dial number (**100 - 599**),

NOTE: If you are already on a line, you must press HOLD before dialing the personal or system speed dial numbers that are stored at the dial pad. Also, if a speed dial's preselected line is in use, the speed dial will not engage.

3.3 Dialing Manually

You can manually dial a number over any telephone line you select. Or, if the installer assigned a prime line or the idle line preference feature to your speakerphone, it will automatically select a line for use when you lift the handset.

- **To dial an outside number manually,**
 1. Press line button to select line (remember: selecting a line is not necessary if a prime line or idle line preference feature is assigned to your telephone and if you lift the handset or press **SPEAKER** to begin the call).
 2. Listen for dial tone.
 3. Dial number.
 4. Lift handset if privacy is desired or if you have a monitor telephone.

3.4 Redialing A Previously Dialed Number

If the last number you have called is busy or is not answering, you can redial it once or initiate a repeated redialing.

The system temporarily saves the first 16 digits of this last manually dialed number for your redial use.

You can permanently save the first 16 digits of this last manually dialed number for later redial by using a **SAVE** button that you or your system installer has preprogrammed.

If a distant party tells you an important telephone number and you want to immediately save it for later redial, you can use the preprogrammed **SAVE** button to permanently save the first 16 digits of that number.

You will overwrite a temporary system-saved number with subsequent dialing activity; however, a permanently saved number remains available until you overwrite it by saving a different number at the same storage location.

- **To automatically redial the last dialed number,**
 1. Press **SPEAKER** (or hang up handset) to disconnect current ringing or busy tone.
 2. Press #.
 3. Listen for ringing or busy tone over the telephone speaker:
 - *Ring tone*: When party answers, pick up handset.
 - *Busy tone*: Press **SPEAKER** to disconnect.
- **To automatically redial the last dialed number once a minute for 10 minutes,**
 1. Press a preprogrammed **ARD** (auto redial) button.
 2. Listen for ringing or busy tone over the speaker.
 3. When called party answers, lift the handset (**ARD** disengages when you end call by hanging up or pressing **SPEAKER**),
 - OR—
 - if called station is busy, your call automatically disconnects and redials.

- **You can cancel this automatic, once a minute redial action with any of the following actions:**
 1. Lift and replace handset,
—OR—
press **SPEAKER** while number is being redialed,
—OR—
use the telephone for some other purpose.
- **To store a number you've just dialed),**
 1. Dial number.
 2. Press preprogrammed **SAVE** button or an unused programmable button. The number is saved until you store a new number in its place.
- **To dial the saved number,**
 1. Press **SPEAKER** or lift handset.
 2. Press button where number is saved.
- **To store a number while you are on a call,**
 1. Press **SAVE** button twice.
 2. Dial the number that you wish to save (the system immediately saves the number for later redial—it does not dial it over the line that you are now on).
- **To later redial the saved number,**
 1. Press line button to select a line.
 2. Press **SAVE** button (system automatically dials the number that you saved earlier).

3.5 Using Line Groups

Some systems have telephone lines arranged into line groups. These line groups are available at each telephone. Your attendant can tell you how your system is arranged. When line groups are available for your use, you may access them for outside calling instead of pressing a line button to select an individual line for use.

- **If your system has line groups, access them as follows:**
 1. Press **INTERCOM**.
 2. Dial desired line group access code:

9	= line group 1
80 through 89	= line groups 2 through 11
60 through 64	= line groups 12 through 16
 3. Listen for outside dial tone.
 4. Dial desired number.
 5. Lift handset to talk.

3.6 Waiting For A Line (Queuing)

If all the lines in a line group are busy, you can place your telephone in a queue to await an idle line. When you share a line with another telephone and the line is busy, you can place your telephone in a queue to await the idle line.

- **To queue for a line group,**
 1. Press **INTERCOM**.
 2. Dial the line group access code.
 3. Hear busy tone.
 4. Dial * 6.
- **If you have line appearance for a particular line and wish to queue for it,**
 1. Note the busy status light (LED).
 2. Press **INTERCOM**.
 3. Dial * 6.
 4. Press line button.

When line group is free, your telephone sounds several short tone bursts. When you hear this, lift handset, hear dial tone, and place call.

- **To cancel line group queuing,**
 1. Press **INTERCOM**.
 2. Dial # 6 and hang up.

3.7 Making Intercom Calls

You can dial an intercom extension manually from the dial pad or automatically using a direct station select (DSS) button that you have previously programmed. There are two methods for making an intercom call. One causes the called telephone to ring. The other causes your voice to sound out at the called telephone. Your installer can set the system to deliver either tone-first or voice-first calling, although all systems have tone-first as the default condition.

Keep in mind that whatever the system setting, a called party can set a voice announce block condition at his or her telephone to prevent all voice announce calls. Furthermore, if he or she blocks voice announce, the system also blocks SOHVA calls .

(The following instructions assume a tone-first default setting. Any user can change a call to voice announce signalling for that call simply by pressing the INTERCOM button again after dialing the extension number or by pressing the DSS button again.)

- **To manually cause the other telephone to ring (tone calling),**
 1. Press **INTERCOM**.
 2. Dial extension number (called telephone will ring).
- **To tone call automatically,**
 1. Press **DSS** button (called telephone will ring).

(The following instructions assume a voice-first default setting. Any user can change a call to a tone signalling for that call simply by pressing the INTERCOM button again after dialing the extension number or by pressing the DSS button again.)

- **To voice announce manually,**
 1. Press **INTERCOM**.
 2. Dial extension number.
 3. Speak your announcement.
- **To voice announce automatically,**
 1. Press **DSS** button.
 2. Speak your announcement.

Some systems will be arranged so that certain stations have a hot line feature. If your station is so arranged, every time you lift the handset, your speakerphone will automatically ring a preselected station (programmed by the installer). To make an intercom call to a station other than this hot line station, or to make a call on an outside line, you must press an intercom or line button before you lift the handset; then you can dial the number.

3.8 Camping On At A Busy Station And Waiting For An Automatic Callback

If you call another station and receive a busy tone or a Do Not Disturb tone, you can press a button that will cause the system to ring your telephone when the station is available. This is called “camping on at a station.” Please note that you can camp on to only one station at a time.

- **To camp on at any busy station,**

1. Dial * 6 when you hear a busy tone.

Your telephone immediately hangs up. When the station you called becomes available, your telephone will ring with five short tone bursts.

- **When you hear five short tone bursts,**

1. Press **INTERCOM**. The other telephone will start ringing.

If you do not press **INTERCOM** after the ring back tones, within the time limit set by the installer, the call back is canceled at that time; however, you can cancel automatic call back at any time before your telephone sounds the tone bursts.

- **To cancel the call back before your telephone sounds the tone bursts,**

1. Press **INTERCOM** and dial # 6.

- **To camp on at a station with a Do Not Disturb condition set,**

1. Dial * 6 when you hear a DND tone. A call back will occur when called station is no longer set in the Do Not Disturb mode.

3.9 *Camping On At An Idle Station And Waiting For An Automatic Callback*

If you call another station and hear ringing but receive no answer, you can press a button that will cause the system to ring your telephone when any activity is initiated at that station.

- **To camp on at a station for which you hear ringing but receive no answer,**
 1. Dial * 6. Callback will occur after any activity is initiated at dialed station. You may cancel the camp-on condition at any time by pressing **INTERCOM** and dialing # 6.

NOTE: *If you make a call in the voice announce mode and receive no answer at the called station, the CALLBK option will still be available to you.*

3.10 *Camping On At A Busy Station And Waiting For An Answer* (Call Waiting)

If the telephone you have called is busy, you can send a call-waiting tone to the telephone and wait on the line for an answer (you must be using the handset for this feature to work).

- **To activate call waiting when you hear a busy tone,**
 1. Dial * 6 (called party hears tone).
 2. Wait on line for reply.

Called party can place the current call on hold or disconnect from the call to answer your call-waiting tone, or choose to ignore your call-waiting tone and continue current conversation.

- **To cancel call waiting,**
 1. Press **INTERCOM**, then dial # 6.
 2. Hang up or press **SPEAKER** to end.
- **To answer a call-waiting tone if you receive one while on a call,**
 1. Hear short tone burst in receiver.
 2. Either place current call on hold or complete call and hang up (waiting call will ring at your telephone).
 3. Lift handset to answer call.

You may, of course, choose to ignore the call-waiting tone and remain on the line with your original caller.

3.11 Overriding A Call Or A Do Not Disturb Condition At Another Telephone *(Executive Override)*

You can override a call in progress or a Do Not Disturb condition at another telephone if the system installer has enabled the executive override feature at your telephone. [If the feature is not enabled, an error tone will sound. Class of Service (COS) programming must be used to enable this feature.]

- **To override an in-progress call at another telephone,**
 1. Make intercom call and hear a busy signal.
 2. Dial * 0 3 (all parties will hear several tone bursts).
 3. Join in-progress call.
- **To override a Do Not Disturb condition at another station,**
 1. Dial * 0 3.
 2. Speak your announcement (if in voice-first mode) or hear ring-back tone (if in tone-first mode).

NOTE: *This action disables DND condition at the other telephone until DND is reset.*

3.12 Making A Subdued Off-Hook Voice Announcement (SOHVA)

You can make a subdued voice announcement to another station that is off-hook and busy on a call if the system is arranged to provide this feature. Your telephone provides a **SOHVA** button for this purpose. You decide whether to deliver a SOHVA message, camp on at that station, set a message-waiting indicator, or hang up when you hear an intercom busy tone.

- ***Make a SOHVA announcement using the SOHVA button as follows:***

1. Make intercom call and hear busy tone.
2. Decide whether to interrupt or not.
3. If you decide not to interrupt the called party, hang up,
—OR—
 1. To interrupt, press preprogrammed **SOHVA** button and hear several quick tone bursts.
 2. Make announcement (busy tone means that the called telephone is in speakerphone mode and you cannot make announcement, that your SOHVA has been denied through system programming, or that the called party has blocked your SOHVA).
 3. Wait on line for verbal reply.

NOTE: The caller cannot control how the announcement is received. This depends upon the equipment used and station programming.

4***Placing Calls On Hold******4.1 Using Chapter Four***

You can place calls on hold and pick them up a short time later in several different ways. This chapter explains the various methods you can use to hold a call.

- 4.2 Holding Calls
- 4.3 Handling Hold Recalls
- 4.4 Parking Calls
- 4.5 Handling Park Recalls

4.2 Holding Calls

You can place a call on hold and pick it back up a short time later. With a regular hold, either you can pick up the held call at your telephone or another user can pick the call up at another telephone that shares the held call line with your telephone. With an exclusive hold condition, you or another user must pick up the held call at your telephone; no other telephone has access to it. You can answer and place on hold a call that is on a line that does not appear at your telephone (a call that is parked or transferred to you, for instance).

After a call has been on hold for the period of time (set by the system installer), the system will cause a one-second tone burst to sound at your telephone, and speed up the flash rate of the line button light. If the call is on exclusive hold, it will revert to manual hold after this hold recall time period.

When you answer a call on a group intercom and place it on hold, the system keeps the call on hold on the group intercom. This means that you or any other user can pick up this call at any station that has access to the group intercom.

The installer can add a directed station hold feature to your telephone. With this feature, you can pick up the held call that has been on hold the longest length of time at another telephone. This feature also allows you to place a call on hold at another telephone in a manner that makes that call appear to have been on hold there for a longer period of time than any other held call.

- **To place a call on hold,**
 1. Press **HOLD**.
- **To retrieve a held call,**
 1. Press line button of the held call (with flashing light),
—OR—
press **TAP**.

NOTE: *The TAP always retrieves the last call placed on hold, regardless of whether you have line appearance for the line on which the call is holding.*

- **To place a call on exclusive hold,**
 1. Press **HOLD** twice.
- **To retrieve exclusive hold,**
 1. Press line button of held call (with flashing light),
—OR—
press **TAP** (if station does not have line appearance).
- **To place a call on directed station hold,**
 1. Answer call.
 2. Press **INTERCOM**.
 3. Dial ***90**.
 4. Dial extension number of station to receive held call.
Your telephone automatically hangs up.
- **To retrieve the longest held call at another station,**
 1. Press **INTERCOM**.
 2. Dial **#90**.
 3. Dial extension number of station that has the held call. This call will then appear to be held at your station.
 4. Retrieve held call by pressing the **TAP** button.

4.3 Handling Hold Recalls

After a call has been on hold for the period of time (set by the installer of your system), the system will cause a hold recall tone burst to sound at your telephone and the flash rate of the line button becomes faster.

If the call is on exclusive hold, it will revert to manual hold after the hold recall period (you will hear four short tone bursts at 12-second intervals). Calls that revert to manual hold can be picked up from any telephone with line appearance for the recalling line or by using an installer-programmed **direct** or **group pick up (DPKUP/GPKUP)** button.

- **If a held line is recalling,**
 1. Answer/retrieve recall,
 2. Press **HOLD** to place the call on hold at your station and restart HOLD timer,
—OR—
press the line button or **TAP** to retrieve the call.

4.4 Parking Calls

You can place a call on hold in the system so that it can be answered from any station that does not have line appearance for the call. You accomplish this by placing the call in one of nine park orbits, where the call remains until it is answered. If the call is not answered within a specified period of time, the system will send it back to your station for service (this is known as a park recall).

When you press a personal or group intercom button and dial a code to retrieve a parked call, the system removes it from the park orbit and places it at your station on the intercom that you selected.

You can preprogram a **PARK** button at your telephone (see section 9.5 *Storing The Feature Buttons*) and use it to simplify your call parking efforts.

- **To park a call in orbit,**
 1. While on the call, press **INTERCOM**.
 2. Press *****.
 3. Dial code for park orbit (**91–99** for orbit 1–9).
 4. Remember the code for later use or make it known to those who need to know it in order to retrieve the call.
- **To park a call using a preprogrammed PARK button,**
 1. While on the call, press the preprogrammed **PARK** button (the call is placed in a preselected park orbit).
- **To retrieve a call that was placed on hold in the system (parked),**
 1. From any station, press **INTERCOM**.
 2. Press **#**.
 3. Dial code for orbit (**91–99** for orbit 1–9),
—OR—
press preprogrammed **PARK** button.

4.5 Handling Park Recalls

When a parked call times out of the system, it will return to your telephone in the form of a park recall (you will hear four short tone bursts at 12-second intervals).

- **To answer a park recall,**
 1. Press associated line button. The call will then connect to your station.
- **To place a park recall on hold at your station,**
 1. Press associated line button to connect the call to your station.
 2. Press **HOLD**. If the call remains on hold for a period of time, it will ring back to your telephone as a hold recall.
- **To re-park a park recall and restart the park timer,**
 1. Answer/retrieve call.
 2. Press preprogrammed **PARK** button (the call will then be placed back in its original park orbit and will remain there until it is answered or until it recalls again),
—OR—
 1. Press **INTERCOM**.
 2. Press * .
 3. Dial code for park orbit (**91-99** for orbit 1-9).

5**Transferring Calls****5.1 Using Chapter Five**

You can transfer calls from your station to another system station several ways. The information in this chapter describes those ways.

- 5.2 Transferring Calls—Screened
- 5.3 Transferring Calls—Unscreened
- 5.4 Making A Hot Transfer
- 5.5 Transferring Calls Using Quick Transfer

5.2 Transferring Calls—Screened

You can answer a call at your station and transfer it to another telephone. If you first identify the caller to the party receiving the transfer (giving that user the opportunity to prepare for the call), you have made a *screened transfer*.

If the telephone to which you are transferring the call is busy, you must recover the call yourself or choose one of several options that may be available at your station. Also, if a transferred call is not answered after a certain length of time (as set by the installer), it recalls to your station. Again, you have several options for servicing the returning call.

- **To screen and transfer a call to another telephone in the system,**
 1. Answer call.
 2. Press **TRANSFER/CONFERENCE** (call is automatically placed on hold).
 3. Dial extension number of telephone to receive transfer or press **DSS** button for that extension.
 4. When intercom party answers, announce call.
 5. Press **SPEAKER** to disconnect (if in speakerphone mode), or hang up.

The intercom party then has the call (if he or she answered the screened transfer with the handset). If you have a speakerphone and announce the transfer over the speaker, the intercom party's telephone will ring with the transferred call after you have hung up.

5.3 Transferring Calls—Unscreened

You can answer a call at your station and transfer it to another telephone. If you transfer the call without first announcing it, you have made an *unscreened transfer*.

If the telephone to which you are transferring the call is busy, you must recover the call yourself or choose one of several options that may be available at your station. Also, if a transferred call is not answered after a certain length of time (as set by the installer), it recalls to your telephone. Again, you have several options for servicing the returning call.

- **To transfer an unscreened call to another system telephone,**
 1. Answer call.
 2. Press **TRANSFER/CONFERENCE** (call is automatically placed on hold).
 3. Dial extension number of telephone to receive transfer or press DSS button for that extension.
 4. Press **SPEAKER** to disconnect (if in speakerphone mode), or hang up. The transfer will ring at the called telephone.

NOTE: *Unscreened transfers ring at busy telephones and wait to be answered.*

- **If an unscreened transfer call is not answered and recalls to your telephone,**
 1. Press flashing line button and lift handset.

5.4 Making A Hot Transfer

A hot transfer is a type of screened transfer. To perform a hot transfer, you voice announce the transfer over the speaker of the telephone that you want to receive the transfer, and release the call to that telephone. The system handles the release in a way that does not require the called party to retrieve the call (the call does not ring at the station).

This feature is useful for transferring calls to people who need to work in a handsfree mode. Once you announce the call and the system completes the transfer, the person receiving the transfer can simply begin speaking toward his or her speakerphone to answer the call.

If you make a hot transfer to a monitor telephone, you can voice announce the call over the telephone's speaker, but the person receiving the outside line transfer will need to lift the handset to answer the call (the telephone will not ring after the announcement is made).

Please note that you can not make a hot transfer to a telephone if its user has enabled the Voice Announce Block feature. This telephone will automatically ring with the transfer requiring the intercom party to answer it as either a screened or an unscreened transfer.

- **To make a hot transfer to another telephone in the system,**
 1. Answer call.
 2. Press **TRANSFER/CONFERENCE** (the call is automatically placed on hold).
 3. Dial extension number of telephone to receive the transfer or press the DSS button for that extension.
 4. Announce call.
 5. Press **TRANSFER/CONFERENCE**.
 6. Press **SPEAKER** to disconnect (if in speakerphone mode) or hang up. The person receiving the transfer then has the call.

5.5 Transferring Calls Using Quick Transfer

When the quick transfer method has been programmed by the installer, it allows you to do an automatic screened or unscreened transfer of an incoming line call without pressing the **TRANSFER/CONFERENCE** button. The transfer occurs automatically whenever you answer a call and then dial the intercom number, or trunk group access or ARS access code for the transfer location.

- **To do a quick screened transfer to intercom or tie line,**
 1. Answer call.
 2. Dial intercom number for transfer location.
 3. When party at transfer location answers, announce call.
 4. Hang up or press **SPEAKER** button.
- **To do a quick unscreened transfer to intercom or tie line,**
 1. Answer call.
 2. Dial intercom number for transfer location.
 3. Hang up or press **SPEAKER**.

This page remains blank intentionally.

6**Conferencing Calls****6.1 Using Chapter Six**

When you join your speakerphone together with one other or several other telephones, the arrangement is known as conferencing. Use the information in this chapter to understand how to make a conference.

6.2 Conferencing Telephones Together

6.2 Conferencing Telephones Together

When you join your speakerphone together with several other telephones on the same call, the result is called conferencing. When using the DXP system, you can make conference calls that involve up to five parties, including you as the originating party, in any combination of outside lines and intercom parties. For example, you can conference three outside lines and two intercom parties, or four outside lines and one intercom party, or five intercom parties—the combinations are up to you. When using the DXP *Plus* system, you can include up to seven parties (in various combinations) in a conference call.

If you are involved in a conference call with two outside lines, you can drop out of this established conference call and leave the outside lines in the conference with each other. This is known as an unsupervised conference call.

- **To set up a conference call that includes any combination of outside lines and intercom parties,**
 1. Make first call.
 2. Press **CONFERENCE** (call is placed on hold automatically).
 3. Select next line and make next call.
 4. Press **CONFERENCE** to establish conference.
 5. Repeat the last three procedures to add more parties.
- **To continue conversation on remaining line after other outside lines have dropped out of conference,**
 1. Press the line button of the remaining party.
- **To retrieve a line from hold and bring that party back into the conference,**
 1. Press **CONFERENCE**.
 2. Press line button.
 3. Press **CONFERENCE**.

NOTE: If all the conference circuits are busy, you will not be able to add a party to the conference.

- **To drop out of a conference call you initiated involving outside lines (creating an unsupervised conference),**
 1. Dial # (lines remain lighted and in use until one or both outside parties disconnect; when only one party drops out of an unsupervised conference, the other party remains on hold until he/she hangs up or the line is answered).
- **To rejoin an unsupervised conference between two outside lines,**
 1. Press TAP.

NOTE: *Conference volume levels depend upon the quality of the external lines.*

This page remains blank intentionally.

7***Using The Other
Telephone Features***

7.1 Using Chapter Seven

This chapter details features that enhance the basic operation of your speakerphone.

- 7.2 Blocking Voice Announce Calls
- 7.3 Diverting Incoming Calls To Another Station
- 7.4 Entering Account Codes
- 7.5 Entering Authorization Codes
- 7.6 Forwarding Calls
- 7.7 Identifying Your Telephone With Automatic Set Relocation
- 7.8 Listening To A Call Over The Telephone
Speaker (Group Listening)
- 7.9 Making A Call Non-Private (Privacy Release)
- 7.10 Monitoring A Conversation Between
Two Telephones (Service Observing)
- 7.11 Muting Your Telephone
- 7.12 Sending A Paging Announcement
- 7.13 Setting A Do Not Disturb Condition At Your Station
- 7.14 Setting The Volume Control
- 7.15 Setting Your Personal Ringing Tones
- 7.16 Switching The Dialing Mode Between Pulse And Tone
- 7.17 Using Background Music
- 7.18 Using Direct Inward System Access (DISA)
- 7.19 Using The Tracker Paging System
- 7.20 Using E and M Tie Lines
- 7.21 Using Call Forward Outside System (CFOS)

7.2 Blocking Voice-Announce Calls

You can prevent voice announcements from sounding over your telephone speaker if you wish. This feature also blocks subdued off-hook voice announcements.

- **To block voice-announced calls,**
 1. Press **INTERCOM**.
 2. Dial * 2.
- **To un-block voice-announced calls,**
 1. Press **INTERCOM**.
 2. Dial # 2.

7.3 Diverting Incoming Calls To Another Station

Call diverting permits you to send an incoming call to another station that you have previously designated. You can divert an incoming call to the designated station whether you are busy or idle. You must program a **FORWARD** button (using the instructions in the programming section) on your speakerphone to serve as a call divert button.

- **To identify the station to receive diverted calls,**
 1. Press **INTERCOM**.
 2. Dial * 5 5.
 3. Dial extension number of station to receive diverted call.
 4. Press **SPEAKER** to end.
- **To divert calls to the designated station,**
 1. Hear ringing and/or see flashing line status light.
 2. Press **FORWARD** (system immediately forwards ringing call to station you designated).

7.4 Entering Account Codes

If the installer has arranged your system for account code entry* to enhance the SMDA reports, you may be signalled to enter an account code before dialing or after answering a call. Depending upon how the installer has programmed your system, these account codes may be “forced” (mandatory) for dialing outside numbers.

*System must be activated through installer programming to accept account codes.

NOTE: *You can program a button on your telephone that will make the account code entry process quicker. Refer to the programming section of this user’s guide for details.*

- **To enter account code on an incoming call,**
 1. Press **INTERCOM**, then dial * 0 4 (call is automatically placed on hold),
—OR—
press preprogrammed **ACCT** button (call is **not** automatically placed on hold).
 2. Dial account code. Your telephone automatically returns to the call after you’ve dialed the complete account code.
- **To enter account code on an outgoing call,**
 1. Press line button.
 2. Press **INTERCOM** (call is automatically placed on hold).
 3. Dial * 0 4,
—OR—
press preprogrammed **ACCT** button (call is **not** automatically placed on hold).
 4. Dial account code.
 5. Listen for dial tone and dial number you are calling.

NOTE: *If you hear an error tone after you have dialed your account code, check the number for validity.*

7.5 Entering Authorization Codes

Authorization codes give you a *walking class of service* option. *Walking class of service* provides you with the mobility to use your class of service (COS) features, prime line assignments, and exception numbers on any telephone in the system. This means that you will not be limited by features that are available to the particular telephone that you happen to be using. Authorization codes are associated with your personal intercom number and are assigned to you by your installer when he or she programs the system. When you enter your assigned authorization code at any system telephone, the code alerts the system to make your normal features available to you. This means that you can use the telephone for anything allowed by your personal intercom number; however, you cannot disturb the last number redial stored there by the normal user. Once you access your telephone features, they remain in effect until any idle time exceeds the authorization code time-out period.

If your telephone includes an installer-programmed **LOCK** button, you can press it and then dial your authorization code to deny other users access to lines and features at your speakerphone.

- **To activate walking class of service,**
 1. Select system telephone to use.
 2. Press **INTERCOM**.
 3. Dial # **0 8**.
 4. Dial your authorization code.

- **To lock your telephone,**
 1. Press installer-programmed **LOCK** button.
 2. Dial your authorization code.

NOTE: *If you wait longer than two seconds to dial a digit after you press the LOCK button, that pause, and any others that you might include, becomes part of the lock code. You must allow for any pauses wherever you inserted them in the number string when you unlock your telephone. This feature provides you with a method for creating a very effective lock and unlock password.*

- **To unlock your telephone,**
 1. Press installer-programmed **LOCK** button.
 2. Dial your authorization code (remember, include any pauses that you inserted when you locked your telephone).

7.6 Forwarding Calls

You can permanently forward the calls that normally ring at your telephone to another telephone. You can forward just your prime line and intercom calls, or you can forward all of your calls. To remind you that your calls are being forwarded, your telephone will sound a short ring burst each time the system forwards a call.

You can also forward calls that ring at your telephone but receive no answer; this feature is valuable if you are frequently away from your desk for short periods of time and find it inconvenient to permanently forward your calls every time you leave. The system installer sets the number of rings that sound at your telephone before the system forwards the calls.

- **To forward your calls,**

1. Press installer-programmed **FORWARD** button,
—OR—
press **INTERCOM** and dial one of the following codes:
 - * 52 = all calls forward immediately
 - * 54 = all calls forward after RNA or Busy
 - * 51 = prime line and personal intercom calls forward immediately
 - * 53 = prime line and personal intercom calls forward after RNA or Busy
2. Dial personal intercom number of telephone to receive forwarded calls or dial desired group intercom number.
3. Press **SPEAKER** or hang up.

- **To cancel call forwarding,**

1. Press **INTERCOM**.
2. Dial # 5. Your telephone automatically hangs up.

7.7 Identifying Your Telephone With Automatic Set Relocation

If your installer has equipped your system with automatic set relocation, you can move your telephone to another location and be given a choice (through a display prompt) as to whether you want to keep your previous programming or use the programming in the new location. Respond to the prompt according to your need.

- **To maintain the extension number and programming features from the old location,**
 1. Connect the telephone line cord to the new jack.
 2. Note the flashing **HOLD** light and press the **HOLD** button while the light is still flashing (your telephone immediately assumes the features from the previous location),
—OR—
do nothing until the **HOLD** light stops flashing (your telephone automatically assumes the features from the previous location).
- **For your telephone to assume the extension number and programming features from the new location,**
 1. Connect the telephone line cord to the new jack.
 2. Note the flashing **HOLD** light and press the # button while the light is still flashing (your telephone immediately assumes the features from the new location).

7.8 *Listening To A Call Over The Telephone Speaker* (Group Listening)

You can turn on the speaker in your speakerphone while you have the handset lifted if you wish. The distant party's voice then sounds over the speaker as well as over the handset; however, only your handset microphone is active.

This *group listening* feature also works if you are using your headset (only the headset microphone will be active).

Refer to the chapter on programming for instructions on how to program the **GPLSN** button.

- **To activate group listening while on a call,**
 1. Press the preprogrammed **GPLSN** button.
- **To cancel group listening,**
 1. Press the preprogrammed **GPLSN** button again.

NOTE: You should cancel Group Listening before hanging up the handset to end the call.

7.9 Making A Call Non-Private *(Privacy Release)*

It is often the case that telephones will share line appearance for one or more lines. When a person in the group uses a line for which others have the same line appearance, the system keeps the call private (others cannot join the conversation by pressing the line button of the line being used). That person can make the call non-private by pressing the preprogrammed **PRIVACY RELEASE** button, allowing other telephones (with line appearance for the line being used) to join the call. Privacy returns to the line when the call is completed.

Refer to the chapter on programming for instructions on how to program the **PRIVACY RELEASE** button.

- **To release privacy from your telephone while on a call,**
 1. Press preprogrammed **PRVCY** button. (The light associated with the **PRVCY** button will remain on steady when your telephone is in a non-private mode.)
Others who wish to join the call must press the active line button on their telephones.

7.10 Monitoring A Conversation Between Two Telephones *(Service Observing)*

If your speakerphone provides the installer-programmed *service observing* feature, you can use it to monitor a conversation or activity at another telephone in an undetected manner. You can use this feature while you are in the speakerphone mode or off-hook.

- **To monitor another station at any time,**
 1. Press **INTERCOM**.
 2. Dial **# 0 3**.
 3. Dial extension number of telephone to be monitored.
 4. Press **SPEAKER** to end monitoring.
- **If you have an installer-programmed service observe (S-OBS) button on your telephone and wish to monitor a station,**
 1. Press **S-OBS** button.
 2. Dial extension or press DSS of station you wish to observe.
 3. Press **SPEAKER** to end monitoring.

7.11 Muting Your Telephone

By using the **MUTE** button, you can block transmission of your voice to the distant party. You can do this whether you are using the handset or the speaker. For example, if someone comes into your office to talk to you and you do not want this conversation to interrupt the distant party, press the **MUTE** button. The **MUTE** button light turns on when you press it and turns off when you press it again.

- **To mute your telephone,**
 1. Press **MUTE** (MUTE function and light turn on). You can still hear the distant party, but he or she cannot hear you.
- **To speak to the distant party,**
 1. Press **MUTE** again (MUTE function and light turn off).

7.12 Sending A Paging Announcement

Your system provides an all-call or a zone page feature that you access by dialing special codes. This arrangement sounds your voice announcement through the telephone speakers. All-call sounds the announcement through all telephones, while zone paging sounds the announcement only through those telephones located in a specific area. Check with your system administrator to determine the type of paging and access method that you should use. If your day-to-day operation requires that you send many paging announcements, you can program a special all-call/zone paging button to give quick access to the feature. See the programming section of this user's guide for details.

Your installer can arrange your system with an external paging unit that you access by pressing a line button or by dialing a special code. This unit sounds the voice announcement over an external speaker unit. Check with your system administrator for specific information on how to operate with such an arrangement.

- **To send a paging announcement,**
 1. Lift handset.
 2. Press **INTERCOM**, then dial **70–77** for zones 1–8 (in the default mode, zone 1 (code 70) provides an all-call function),
—OR—
press a preprogrammed **PAGE** button.
 3. Make announcement.
 4. Remain on line if awaiting a reply (known as a meet-me page),
—OR—
hang up handset.

At times other telephone users may page you with instructions to meet them on line. This is known as a meet-me page. You can go to the received page telephone, dial a code, and be in contact with the paging party.

- **To reply to a meet-me page,**
 1. Answer the telephone receiving the page.
 2. Press **INTERCOM**.
 3. Dial **78**.
 4. Meet paging party on line.

7.13 Setting A Do Not Disturb Condition At Your Station

This feature keeps calls from ringing at your speakerphone, and makes your station appear busy to intercom calls. If your installer has programmed your station to have this feature, you can enable it as needed.

Generally, callers cannot override this feature. They hear two quick tone bursts every two seconds when they call a telephone that is set to the Do Not Disturb mode. However, the installer may program some telephones with the ability to override a Do Not Disturb condition at another telephone.

You can program a permanent Do Not Disturb button to provide yourself with quick access to this feature if you wish. See the programming section of this user's guide for details.

- **To enable Do Not Disturb, proceed as follows:**
 1. Press preprogrammed DND button. The light associated with the DND button turns on when the feature is active,
—OR—
press **INTERCOM** and dial # **0 1**.
- **To override a Do Not Disturb condition at another telephone,**
 1. Make intercom call and hear *Do Not Disturb* tone.
 2. Dial * **0 3** (called party will hear several short tone bursts).
 3. Wait for reply.
- **To disable Do Not Disturb, proceed as follows:**
 1. Press preprogrammed **DND** button. The light associated with the **DND** button turns off when the feature is disabled,
—OR—
press **INTERCOM** and dial # **0 1**.

7.14 Setting The Volume Control

Your telephone has a rocker-type volume control. This is a multipurpose control that you can use to set the volume (loudness) of the ringer, the speaker, the handset, the headset, background music, and the group listening mode. You can either press and hold down the VOLUME UP/VOLUME DOWN rocker switch to automatically step through the volume levels for each mode, or you can press the switch once for each change in volume that you desire.

You may adjust the loudness of the distant party at any time during a call whether you are listening over the speaker, the headset, the handset or the group listen mode by pressing VOLUME UP or VOLUME DOWN. When the call ends, the system resets the loudness of all future calls to the programmed (default) setting.

You can set a permanent loudness level for any volume control setting. The level will remain at this loudness (referred to as the default setting) until you change the setting.

- **There are four *ringer* loudness levels (plus an off position). Set these levels as follows:**
 1. While your telephone is on-hook and idle, press **VOLUME UP** or **VOLUME DOWN** once for each change in loudness that you desire. The ringer sounds once for each change as an example of the current setting. Your selection becomes the new default setting and will result in your telephone ringing at that level for all future calls (until you change the default by repeating the above procedure).

NOTE: If you set the ringer to the “off” position, your telephone will sound a short ring burst once for each call you receive at your station while the ringer is off.

- **There are eight *speaker* loudness levels. Set these levels for the current call as follows:**
 1. While on a call and in speakerphone mode, press **VOLUME UP** or **VOLUME DOWN** once for each change in loudness that you desire.
- **There are at least eight *handset* loudness levels that you can set for the current call as follows:**
 1. While on a call and in handset mode, press **VOLUME UP** or **VOLUME DOWN** once for each change in loudness that you desire.
- **There are eight *group listening* loudness levels. Set the level for the current call as follows:**
 1. While on a call and in the group listening mode, press **VOLUME UP** or **VOLUME DOWN** once for each change in loudness that you desire.
- **There are eight *background music* loudness levels. To set the level,**
 1. While background music is on at your station, press **VOLUME UP** or **VOLUME DOWN** once for each change in loudness you desire. This level will remain set for background music until you change it again, even if you turn off the feature and then reactivate it.
- **To set a permanent speaker, handset, or group listening loudness for all future calls,**
 1. Press **INTERCOM**.
 2. Activate speaker, handset, or group listen mode to be affected.
 3. While in that mode, press **VOLUME UP** or **VOLUME DOWN** to adjust loudness.
 4. Dial **** 7** or press a preprogrammed **VOLSV** button to hold the loudness at the last setting for all future calls (until you change the default again).
 5. Repeat this procedure in each mode until you've set all default volume levels.

7.15 Setting Your Personal Ringing Tones

You can choose one of six different ring tones for your telephone. Often, when several telephones are located close together, each user chooses a different personal ring tone.

- **To select one of the ring tones, proceed as follows:**

1. Press **INTERCOM**.
2. Dial **** 4**.
3. Dial number **(1-6)** to select ring tone.
4. Press **SPEAKER** to end.

The next time your telephone rings, you will hear the new ring tone.

7.16 Switching The Dialing Mode Between Pulse And Tone

If the telephone service in your locality is pulse (rotary dialing), the installer arranges your telephone to dial in this manner. If you need to send tones during a dialing sequence (for example, to send bank-by-telephone tones), you can convert to tone dialing mode while dialing. The system will switch back to pulse dialing when you end your call.

You can store a # as part of a speed dial number to cause an automatic switch from pulse to tone where needed in a number sequence.

- **To convert to tone dialing at any time during dialing or while on an active call,**
 1. Press #.

7.17 Using Background Music

If the telephone system supplies background music, you can turn it on at your speakerphone while it is on-hook and idle. The system automatically turns background music off during calls and voice announcements.

NOTE: *The system can provide music from two sources; however, this feature must be enabled by the system installer.*

- **To turn the music on,**
 1. Press **INTERCOM**.
 2. Dial * **11** for music source one or * **12** for music source two (the **SPEAKER** light turns on when background music is on).
 3. Adjust music volume with the volume button.
- **To turn the music off,**
 1. Press **INTERCOM**.
 2. Dial # **1**, (the **SPEAKER** light turns off when background music is off).

7.18 Using Direct Inward System Access (DISA)

This feature allows you to call into the digital communications system from an external telephone. You can call directly to intercom extensions and talk to the intercom parties or, if the system includes a voice mail option, leave messages for them if they are not available.

When you call the DISA telephone number and dial your authorization code, the system treats your call as it would treat one coming from a system telephone and permits you to use many of the same features that you can use when you are calling from your assigned station. (Authorization codes are associated with personal or group intercom numbers and are assigned to you by your installer when he or she programs the system.)

If you use your DISA access to make a call through the system and out on an outside line, the system applies all the toll restriction and automatic route selection to the call that the installer has programmed for the line that you are using.

If you dial an incorrect authorization code, or the system is busy with other DISA calls, you will either hear an error tone, or the system will automatically route your call to one of the following areas (as determined by your system installer):

- a designated station where you can talk to the system attendant,
- a digital voice announce that will prompt you to take additional action,
- a proprietary voice mail station where you will be prompted to leave a message.

The system allows you three tries at dialing your authorization code before it routes your call as detailed above.

Some systems provide voice prompts to DISA callers and other systems do not. If you encounter voice prompts when you call on the DISA line, follow the prompt directions to complete your call.

Further, some systems with voice prompt enhancement, provide a one-digit menu that prompts you to dial a single digit to reach available departments, use system features, or obtain operator assistance.

NOTES: 1. DISA is not recommended for use on loop start lines without disconnect supervision. While DISA will function, Comdial will not be liable for its performance under any condition where disconnect supervision is not provided.

2. If you are selecting a line group through DISA for outside calling, you can raise the audio level on this line when needed. Do this before you select the line by dialing **7, and then dialing 1 for 0 dB, 2 for +3dB, or 3 for +6dB of gain. In some cases, added gain can introduce circuit instability that presents itself as a singing sound, which can interfere with dialing and voice communications. If you experience this condition, select a lower gain setting.

Comdial has taken reasonable steps in the design of all product features, including DISA, which protect against unauthorized or fraudulent access to, or use of, a system, or which protect against unauthorized, fraudulent or unaccounted-for access to, or use of, long distance lines. However, no system is entirely invulnerable or immune from unauthorized or fraudulent access or use, or unaccounted-for access or use, and therefore Comdial disclaims any and all liability, and makes no warranty, express or implied, relating to unauthorized or fraudulent access or use, or unaccounted-for access or use.

- **To make a DISA call to an intercom number,**
 1. Dial number for DISA line (listen for voice prompt if available).
 2. Dial extension number.
 3. If station does not answer or is busy you will either hear busy tone or hear voice prompt if available. If you dial an invalid number, you will hear error tone.
 4. If voice prompt provides dialing codes, dial proper code for services such as: track, message waiting, or voice mail.
- **To make a DISA call to use system features,**
 1. Dial number for DISA line (listen for voice prompt if available).
 2. Dial authorization code (listen for voice prompt if available; otherwise, hear stutter-style dial tone—remember, the system gives you only three tries to dial your code correctly).
 3. Dial feature code and listen for acknowledgment tone.

System Features Available To DISA Callers	Default Dialing Code
Account code entry	*04
Automatic route selection access	9
Call waiting on busy	*6
Do not disturb override	*03
Intercom dialing/call announcing	nnnn
Message wait reset*	#3
Message waiting set*	*3
Personal speed dial*	*01
System speed dial	*01*
Tracker access**	*8
Tracker page orbit retrieval**	#8
Trunk group access	9, 80–89, 60–64
Zone paging	70–77
* You must have an assigned personal intercom number to use this feature.	
** Your system must provide the Tracker option to activate this feature.	

7.19 Using The Tracker Paging System

The Tracker Paging System option allows you to send call back and parked call messages to Tracker pagers assigned to station extension numbers.

Along with the parked call message, the system parks the call in orbit for retrieval by the paged party. The type of message that the system delivers (either alphanumeric or numeric-only) is dependent upon the Tracker pager model in use at the station.

When outside callers call into a system that has both a Tracker Paging option and a voice mail option installed, the system gives these callers the option of either leaving a message or tracking the person that they are calling.

If you have a Tracker pager assigned to your personal intercom number, you can receive messages that someone else sends you. The system automatically installs the Tracker pager for your use; however, you can disable it when you do not wish to receive paged messages and when you leave at the end of your day. Of course, if you do disable your Tracker pager at the end of your day, be sure to enable it at the beginning of your next day.

If your day-to-day operation includes extensive Tracker usage, your installer may include a **TRACK** button at a programmable button location.

- **To track a called party after receiving a ring—no answer,**
 1. Make an intercom call to someone and receive no answer.
 2. Press **INTERCOM**, and dial * 8.
 3. Hear confirmation beep (Tracker page accepted) or hear busy tone (Tracker page not accepted).
 4. Press **SPEAKER** to end.
- **To track a called party without first calling them,**
 1. Press **INTERCOM** and dial * 8.
 2. Dial extension number.
 3. Hear confirmation beep (Tracker page accepted) or hear busy tone (Tracker page not accepted).
 4. Press **SPEAKER** to end.
- **To use Tracker to transfer a call to a park orbit for retrieval and transmit the call's park orbit code and caller ID information (if available),**
 1. Answer call and press **TRANSFER/CONFERENCE**,
 2. Dial extension number.
 3. If the called station does not answer or is busy, press (**INTERCOM**, and dial * 8).
 4. Hear confirmation beep (Tracker page accepted) or hear busy tone (Tracker page not accepted).
 5. Press **SPEAKER** button to end.

NOTE: Tracker parked calls will recall to your station after a pre-programmed time-out. You can either replace the call into another Tracker page orbit or retrieve the call for servicing.

- **To retrieve a call that you parked using the Tracker option,**
 1. Press **TAP**.
- **If you receive a parked call message on your Tracker pager,**
 1. Go to any system station.
 2. Press **INTERCOM**.
 3. Dial Tracker pager displayed orbit code (**#800–#899**).
 4. Retrieve call.
- **To enable or disable a Tracker pager at your station,**
 1. Press **INTERCOM**.
 2. Dial code **# 0 7** to enable pager, or **# 0 6** to disable pager.
 3. Enter extension number.

7.20 Using E and M Tie Lines

E & M tie line operation is typically used in applications where one group of users often need to call parties located in one or more remote locations. In these applications, your system is directly tied to another similar system at the remote site(s).

If your system has been configured for tie line operation, the procedures you use to place calls, transfer calls, and set up conference calls differ slightly from other types of connections. These procedures are described in this section.

- **To make a call on an E & M tie line,**

1. Dial the E & M access code that was assigned by the installer, or dial **9** (if your system was configured by the installer to use Automatic Route Selection (ARS)),

—OR—

press the E & M line button, if programmed by the installer.

2. Wait until you hear a dial tone, then dial the intercom number for the party you wish to reach at the remote site. You will hear a fast busy signal if you dialed an invalid number.

- **To transfer a call over an E & M tie line,**

1. Answer the incoming call.
2. *Press the **TRANSFER/CONFERENCE** button.
3. Dial the E & M access code that was assigned by the installer, or dial **9** (if your system was configured by the installer to use Automatic Route Selection (ARS)),

—OR—

press the E & M line button, if programmed by the installer.

4. Wait until you hear a dial tone, then dial the intercom number for the party you wish to reach at the remote site. You will hear a fast busy signal if you dialed an invalid number.

* You can eliminate this step if the installer has configured your system for quick transfer and you are accessing the E & M line with a group access code.

5. If you are doing a screened transfer, stay on the line until the called party answers so that you can announce the call,

—OR—

hang up (unscreened transfer). If the called party does not answer, the call will return to you after the transfer recall timer expires.

NOTE: *When you transfer a call to the remote end of the E & M tie line, you create an unattended conference causing your telephone to appear as though it is on hold.*

6. Press **TAP** button to rejoin the transferred call.
7. After rejoining the conference, press **#** to place the call on hold again or hang up to terminate the call.

If neither party hangs up, or you have not terminated the call, the call will return to you when the line-to-line connection timer expires.

- **To set up a conference call on an E & M tie line,**
 1. Make first call.
 2. Press **TRANSFER/CONFERENCE**; call is placed on hold automatically.
 3. Select next line and make next call.
 4. Press **TRANSFER/CONFERENCE** to establish conference.
 5. Repeat the last three procedures to add more parties.
- **To continue conversation on remaining line after other outside lines have dropped out of conference,**
 1. Press the line button of the remaining party.
- **To retrieve a line from hold and bring that party back into the conference,**
 1. Press **TRANSFER/CONFERENCE**.
 2. Press line button.
 3. Press **TRANSFER/CONFERENCE**.

NOTE: *If all the conference circuits are busy, you will not be able to add a party to the conference.*

- **To drop out of a conference call you initiated involving outside lines (creating an unsupervised conference),**
 1. Hang up (lines remain lighted and in use until one or both outside parties disconnect).
- **To rejoin an unsupervised conference between two outside lines,**
 1. Press **TAP**.

***NOTE:** Conference volume levels depend upon the quality of the external lines.*

7.21 Using Call Forward Outside System (CFOS)


The Call Forward Outside System (CFOS) feature allows you to forward incoming or transferred line calls to telephone numbers that are outside the system. The CFOS feature forwards calls over any available outbound lines or line groups and does not use any conference circuits. Since CFOS involves outbound calls, those calls are subject to all line access, toll restriction, and automatic route selection restrictions normally imposed on your calls. If CFOS cannot service a call, it rings the system as a normal call. The CFOS feature is useful if you need to forward your after-hours calls to an alternate site such as your home or cellular telephone.

- **To activate CFOS on your telephone,**
 1. Press **CFOS** pre-programmed button,
—OR—
press **INTERCOM** and dial *56.
 2. Select outbound line (press line button or dial appropriate code).
 3. Select forward destination (dial number or press speed dial button).
 4. Press **SPEAKER** to end (CFOS button red status light on steady).

- **To deactivate CFOS,**
 1. Press **CFOS** preprogrammed button,
—OR—
press **INTERCOM** and dial *56.
- **To join an active CFOS call from the CFOS-enabled station,**
 1. Note flashing **HOLD** light indicating active CFOS call, and press **TAP**.
 2. Join CFOS-forwarded party and CFOS destination in a conference call.

Comdial has taken reasonable steps in the design of all product features, including CFOS, which protect against unauthorized or fraudulent access to, or use of, a system, or which protect against unauthorized, fraudulent or unaccounted-for access to, or use of, long distance lines. However, no system is entirely invulnerable or immune from unauthorized or fraudulent access or use, or unaccounted-for access or use, and therefore Comdial disclaims any and all liability, and makes no warranty, express or implied, relating to unauthorized or fraudulent access or use, or unaccounted-for access or use.

This page remains blank intentionally.

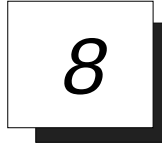

Sending And Receiving Non-Verbal Messages

8.1 Using Chapter Eight

This chapter details the several different methods that you can employ to send and receive messages with your speakerphone without using verbal communications.

- 8.2 Lighting The Message Waiting Light
- 8.3 Sending Messages To LCD Speakerphones
- 8.4 Sending Response Messages

8.2 Lighting The Message-Waiting Light

If the system installer designates your speakerphone as a *central message desk* or programs it to have message-wait originate ability, you can turn on the message-waiting light of any other telephone. This light lets that telephone user know that you have a message for him or her. In addition to the message waiting light, leaving a message indication at a station also causes the dial tone at that station to sound in a broken manner when the station user takes his or telephone off-hook.

If your telephone receives a message and has a DSS button that is programmed to call the station that left the message, the light next to that station's DSS button on your telephone will flash.

- **To turn on the message-waiting light (and a broken dial tone) at an idle telephone,**
 1. Press **INTERCOM**.
 2. Dial * 3.
 3. Dial extension number of station to be alerted. The message-waiting/HOLD light of called station will flash.

- **To turn off the message waiting light at a busy or idle station,**
 1. Press **INTERCOM**.
 2. Dial # 3.
 3. Dial extension number of station that was alerted.
The message-waiting light of called station will turn off.
- **To turn off the message-waiting light during message-delivering conversation,**
 1. Press **INTERCOM** once if off-hook, twice if on-hook.
- **To receive a message at an alerted station,**
 1. Observe flashing message-waiting light or hear the broken dial tone.
 2. Press **INTERCOM**, then press **HOLD**. The station that left message is called automatically.

NOTE: Only the person who sent the message and the person receiving the message can turn the indicator off.

8.3 Sending Messages To LCD Speakerphones

You can set system-supplied messages at your station to be received and displayed by a calling LCD speakerphone. These messages give the caller information on your telephone status. Get a list of the available messages from the attendant and write them on the blank chart on the next page.

- **To turn on a message from your telephone,**
 1. Press **INTERCOM**, then dial * **0 2**.
 2. Press # to clear current message if one is stored.
 3. Dial the desired code number from your message list (01–30) on the next page. If you use the default messages *Back at* and *Call*, add to them as follows:
For *Back at* message, dial the code for time numbers and colon from dialing codes table (for example, dial # **12 00 01 29 04 05** for a space and the time 01:45).
For *Call* message, dial code for telephone number of where you'll be (for example, dial # **12 09 07 08 15 02 02 00 00** for a space and the number 978–2200,
 4. Press #, then press **SPEAKER** to end message.
 5. Intercom light flashes.

- **To turn off the message and your intercom light,**
 1. Press **INTERCOM**, then dial # **0 2**.

DIALING CODE TABLE			
Character	Dialing Code	Character	Dialing Code
1	01	8	08
2	02	9	09
3	03	0	00
4	04	space	12
5	05	–	15
6	06	:	29
7	07		

GCA70-224 Sending And Receiving Non-Verbal Messages

LCD MESSAGE LIST (Write the attendant supplied messages here.)	
Dial Code	Message
01	Back at (default message 1)
02	Call (default message 2)
03	Ask them to hold (default message 3)
04	Take a message (default message 4)
05	I will call back (default message 5)
06	
07	
08	
09	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	

8.4 Sending Response Messages

By programming one or more **RESPONSE MESSAGE** buttons on your speakerphone, you can respond with a variety of messages to many calling situations. For example, if you call another station and receive a busy signal or no answer, you can send one of 30 system-supplied messages, or you can send the same message each time the situation arises. Further, you may at times receive intercom or SOHVA calls that you decide not to answer, and you can send a message to the display of the calling LCD speakerphone for the caller to read.

This section tells you how to use the **RESPONSE MESSAGE** button(s) to send messages to LCD speakerphones. Refer to section 9.6 for instructions on programming the **RESPONSE MESSAGE** button(s).

- **To send an LCD message when you call and receive busy signal or no answer,**
 1. While still on the call, press the appropriate fixed **RESPONSE MESSAGE** button to send a preselected message (*Call [your name]*, for example) to the other telephone.
- **To send an LCD message to a caller who has initiated a SOHVA or intercom call from a LCD telephone,**
 1. Hear the SOHVA tone or voice announcement in your handset or headset.
 2. Press the appropriate fixed **RESPONSE MESSAGE** button to send a preselected message (*I Will Call Back*, for example) to the calling telephone,

9**Programming Your Telephone****9.1 Using Chapter Nine**

Use this chapter's information to understand the various programming steps that you can take with your speakerphone.

- 9.2 Programming For Speed Dialing
- 9.3 Storing Speed Dial Numbers
- 9.4 Storing DSS Numbers
- 9.5 Storing The Feature Buttons
- 9.6 Storing The Response Message Button

9.2 Programming For Speed Dialing

Speed dialing is a feature that lets you:

- **store and dial lengthy numbers using one or two buttons.**
- **store and dial intercom numbers of frequently called telephones.**
- **store frequently used feature codes.**

You can store numbers for speed dialing at the following locations:

- **at any programmable button that is *not now assigned as a line button or other feature* by the system administrator or installer.**
- **at the keypad numbers 0–9.**
- **on a secondary level at either storage location.**

Before you begin programming, write down the intercom or outside line you will use and the number digits that you are storing. Then, as you program the speed dial numbers, write the first and second level numbers on your telephone's ID strips. You can also fill out the charts on the next page, if you wish, for a personal record of your stored numbers.

NOTES: *1. You cannot reprogram the HOLD and INTERCOM button locations from your telephone. Further, you cannot store a feature code on a second level at any storage location.*

2. The Federal Communications Commission (FCC) requires that when programming emergency numbers and (or) making test calls to emergency numbers:

- *Remain on the line and briefly explain to the dispatcher the reason for the call.*
- *Perform such activities in the off-peak hours, such as early morning or late evening.*

Speed Dial Numbers (Programmable Buttons)			
1		13	
2		14	
3		15	
4		16	
5		17	
6		18	
7		19	
8		20	
9		21	
10		22	
11		23	
12		24	

Personal Speed Dial Numbers (Keypad Buttons)			
1		6	
2		7	
3		8	
4		9	
5		10	

9.3 Storing Speed Dial Numbers

- To store an outside number as a speed dial number, proceed as follows:

NOTE: *Programming overwrites existing speed dial numbers at button locations.*

1. Press **INTERCOM**.
2. Dial * * 1.
3. Press programmable button or dial pad button to choose storage location (remember, to access second level storage at a programmable button, press **HOLD** first).
4. Make your speed dial route selection choice from the following list:
 - press line button to select outside line,
 - dial **00** to select prime line or last line used,
 - dial **01–16** to select line group,
 - press **INTERCOM** button or dial **8** to select intercom.
5. Dial number (up to 16 digits long—include * and # if needed),

NOTE: *You may need a pause between numbers to compensate for differences in response time between your system and the host system (ask your attendant about this). To store a pause, press **HOLD**, then continue dialing. If your system is behind a host system that needs a hookflash to access a feature, press **TAP** to store a hookflash, then continue dialing.*

6. Press **TRANSFER/CONFERENCE** to store number,
7. Press next location button and store next number, repeat previous steps until all numbers are stored,
 - OR—
 - press **SPEAKER** to end.

9.4 Storing DSS Numbers

- To store an intercom number as a DSS number,

NOTE: *Storing DSS numbers at button locations will overwrite any previously stored numbers.*

1. Press ITCM.
2. Dial * * 3.
3. Press programmable button to choose DSS location.
4. Dial extension number.
5. Press next location button and store next DSS number.
6. Repeat the previous step until all DSS numbers are stored,
—OR—
press **SPEAKER** to end.

Write Your DSS Numbers On This Chart	

9.5 Storing The Feature Buttons

If you find that you are using certain features often, you can create feature access buttons to make operations easier. Some features that you may want to use frequently are defined as follows:

Account Code Button (ACCT)—allows you to enter an account code for call record purposes.

Automatic Call-Back Button (CAMP)—arranges the system to ring your and another's telephone as soon as the other telephone becomes idle.

Call Forward Buttons —allows you to forward all of your calls to another telephone. You can program any one of four different feature buttons—Forward All (**FWD-A**), Forward Personal (**FWD-P**), Forward All RNA (**FWDRA**), and Forward Personal RNA (**FWDRP**).

Do Not Disturb Button (DND)—prevents other telephones from ringing your telephone.

Group Listen Button (GPLSN)—allows others to hear a conversation over the telephone speaker while you use the handset or headset; the distant party can hear only the conversation transmitted through the handset or headset microphone.

Music Button (MUSC)—allows you to enable or disable background music; also allows you to choose from two preprogrammed music sources—Use MUSC1 for music source 1 and MUSC2 for music source 2.

Page Button (PAGE)—provides one-button access to paging zones **1–8**. Use PAGE1 for zone 1, PAGE2 for zone 2, and so forth.

Park Button (PARK)—parks calls in preselected park orbit. Use PARK1 for park orbit 1, PARK2 for park orbit 2, and so forth.

Pick-Up Button (DPKUP/GPKUP)—allows you to pick up a call ringing elsewhere in your system.

Privacy Release Button (PRVCY)—releases privacy for current call.

Saved Number Redial Button (SAVE)—redials the last number saved at this button location (good for short-term storage).

Track—Tracker (pager activate button); sends message to pager display.

Voice-Announce Block Button (VABLK)—blocks voice announcements.

You can store feature access codes at programmable buttons to provide yourself with one-button access to features that you use quite often. To find your feature codes of interest, turn to the *Quick Reference Guide* that is located at the end of this publication.

- **To create these feature access buttons, proceed as follows:**
 1. Press **INTERCOM**.
 2. Dial * * **3**.
 3. Press programmable button to choose storage location.
 4. Dial the access code for the feature.
 5. Press next location button and store next feature code.
 6. Repeat previous step until all desired feature codes are stored.
 7. Press **SPEAKER** to end.

For example, the access code for the Group Call Pick Up feature is # **4**. To program this feature, press **INTERCOM**, dial * * **3**, press the desired programmable button, dial # **4**, and press **SPEAKER**.

9.6 Storing The Response Message Button

You may program a **RESPONSE MESSAGE** button, which allows you to send an LCD message to a caller who has initiated a SOHVA or intercom call from an LCD telephone, or to send an LCD message to an LCD telephone that you call and receive a busy signal or no answer.

A fixed **RESPONSE MESSAGE** button sends the same preselected message every time; you can program multiple fixed response message buttons at your station. If, for example, you know that you want to send the message *I Will Call Back* every time you receive a SOHVA you cannot respond to, program a fixed **RESPONSE MESSAGE** button with that message and label the button accordingly.

Before programming, obtain a list of system-supplied messages from your attendant or system installer so that you can choose an appropriate message.

You may save as many different fixed **RESPONSE MESSAGE** buttons as you need in order to respond instantly with the appropriate LCD message for any calling situation.

- **To store a fixed RESPONSE MESSAGE button,**
 1. Press **INTERCOM**.
 2. Dial * * 6.
 3. Press programmable button for **RESPONSE MESSAGE** button location.
 4. Dial message number (**01-30**) from list of messages.
 5. Press # to save programming.
 6. Press **SPEAKER** to end.
 7. Label button location.

This page remains blank intentionally.

10***Troubleshooting
Your Telephone***

Should your speakerphone or monitor telephone fail to operate properly, review the following list of symptoms and causes for help.

Symptom	Possible Cause
INTERCOM light flashing	Your messaging is set. Press INTERCOM then dial # 0 2 and hang up. Station is ringing with ringer off.
HOLD light flashing with no line on hold	Another telephone has activated your message waiting light. Press INTERCOM and then press HOLD to retrieve message. This action will call party who activated light. Once you have received message, party who activated light (while still talking to you) may press INTERCOM twice to turn off the light.
MUTE light on	MUTE is activated. To cancel, press MUTE .
SPEAKER light on steady	Background music feature activated even though the system does not provide background music. To cancel, press INTERCOM then dial # 1 .
Error Tone (three steady tones)	May occur when incorrect buttons are pressed during speed dial programming. For example, if a button has a line assigned to it, or was not enabled for speed dial programming by the installer.
If you cannot receive a voice announce call.	Voice announce block has been activated. To cancel, press INTERCOM then dial # 2 .

This page remains blank intentionally.

Glossary

A

Account code: A number you enter for incoming or outgoing calls that you want recorded or applied to a specific account for reporting purposes. The system can print out a record of each call and the account to which the call has been charged. Account code entry can be forced or optional, as determined through system programming.

All-call paging: Paging announcements that are made through the speakers of all stations in the system.

Answer button: An installer-programmed button that allows a user to answer a call that is audibly ringing at his or her station (it is possible for more than one call to be ringing at the same time; however, only one of the calls will ring audibly).

Automatic call back: System will ring a telephone when it becomes idle after being called while busy.

Automatic dialing: Using programmable buttons to store numbers for one- or two-button speed dialing.

Automatic redialing: Turning on a program that automatically redials the last number dialed once a minute for 10 minutes.

B

Busy Lamp Field (BLF): Busy lamp field or BLF is a term for a light that identifies current call status of a DSS station.

C

Call forward: Designating another telephone to receive calls normally directed to the user's telephone.

Call park: Placing an active call in system hold (park orbit) and retrieving it at any system telephone.

Call pickup: Answering a call at one telephone when it is ringing at another telephone.

Call waiting: When you call a system telephone and hear a busy tone, you can dial a code that sends a call-waiting tone to the busy telephone to let the user know that a call is waiting. You may end the current call or place it on hold in order to answer your call-waiting tone.

Call transfer: Transferring a call from one station to another. The transfer can be screened (you find out who is calling and announce the caller to the party receiving the transfer) or unscreened (you transfer the call without first identifying the calling party).

Camp-on: Setting an automatic call back condition at a telephone that is busy or unattended. When the telephone becomes available, the system will ring your telephone to signal that the called telephone is ready for your call.

Central message desk: A station assigned to control message waiting lights and deliver messages to other stations in the system.

Class of Service programming: Customized programming of your system by the installer that establishes the basic operating parameters of the system and individual stations.

Conference call: Joining up to five telephones (including your own) in a single call. If you set up a conference call and then drop out of it, you have created an *unattended conference*, **which will disconnect when all parties hang up.**

D

Direct Station Selection (DSS): Using one button to place intercom calls; the button is sometimes referred to as a DSS button.

Do not disturb: A mode that disables incoming call ringing and intercom calling.

E

Exclusive hold: A call placed on hold so that it can be retrieved only at the telephone where the hold was originated.

Executive override: Breaking into a conversation at a busy called telephone or overriding a DND condition set at another telephone. This intrusion is announced by several quick tone bursts.

G

Group intercom number: A number that is available for use by several stations (i.e., more than one person is assigned to a single extension number).

Group listen: A feature that allows you to activate your telephone speaker so that other people may hear the distant party's voice. Only the handset or headset microphone remains active, however.

H

Hookflash: Occurs when the TAP button is pressed under certain dialing conditions. Needed for activating host system features.

Hot transfer: A type of screened transfer that does not ring at the station after the call announcement has been made over the telephone speaker. A person receiving a hot transfer hears the call announcement over the speaker and then can begin speaking toward the telephone to answer the transfer without lifting the handset (speakerphones only).

K

Keypad: Buttons 0 through 9, * and # used for dialing numbers.

L

Last number redialing: Automatically dialing the last number dialed.

Lock button: Users can press this installer-programmed button and dial an authorization code to deny other users access to lines and features at their telephone.

M

Message deposit: Calling an LCD speakerphone and leaving a message on its display for the user to read.

Messaging: Turning on a telephone lamp to let the user know that a message awaits pickup; leaving a message on the display of a telephone that gives information on your status.

Mute: A fixed feature button that keeps a distant party from hearing your conversation.

N

Night transfer: Transferring incoming calls to a particular station(s) for off-hour answering.

P

Parked calls: Calls that are placed on hold in the system so that they can be retrieved from any other system telephone by dialing a code for the zone in which the call is parked.

Personal intercom number: A unique number assigned to a station for the exclusive use of that station's user.

Personal ringing tones: A telephone can be arranged to ring in one of eight distinctive tones.

Prime line: A line designated to a particular telephone and automatically selected when the handset is lifted.

Privacy release: A system feature that allows other users access to the line you are currently on so that they may join in the call (normally, the system prohibits other users from pressing the line button of an active call in order to access the line).

Programmable buttons: Each telephone or station has buttons that can be user-programmed for speed dialing numbers or feature codes or other special-purpose dialing requirements.

Pulse/Tone switching: Changing from pulse/rotary dial signals to tone signals.

R

Recall: A call that has been placed on hold, parked, or transferred by a station will ring back at that station if the call is not answered in a specified period (set by the system installer).

Release button: When a telephone user presses this installer-programmed button, the system discontinues the current active status and returns the station to its idle state.

Response messaging: Responding non-verbally to a calling station by pressing a programmed button that sends a message to the calling station's display.

Ringing line preference: An automatic connection to any outside line ringing at the station when the station handset is taken off-hook.

S

Saved number redialing: Saving a last manually dialed number for later speed dialing.

Screened transfer: A call that is transferred from one system telephone to another and is accompanied by an announcement of the call to the person receiving the call.

Service observing: Monitoring activity at another telephone within the system in an undetected manner.

Silent mode button: When the user presses this installer-programmed button, the ringer at his or her station is turned off for the duration of the current ringing call and is restored when a new call rings at the station.

Speed dialing: One- or two-button dialing using the keypad buttons or other programmable buttons. Speed dialing can be station calls (personal and accessed by only one specific user) or system calls (numbers used and accessed by anyone in the system).

Split button: Users can press this installer-programmed button to switch between the last call placed on hold (intercom, outside line, or conference) and a current, active call.

Subdued off-hook voice announcement (SOHVA): A private announcement that can be made to a busy party which they hear through the handset or headset receiver.

T

TAP: Depending on your system's programming, this button gives you a new dial tone, activates a hookflash, or retrieves the last call placed on hold at your station.

Tone call: A ringing intercom call.

T/C: A fixed feature button that allows you to transfer calls and set up conference calls.

U

Unscreened transfer: A call that is transferred from one system telephone to another without an announcement of the call to the person receiving the transfer.

V

Voice announce: A intercom call made over the speaker of the called telephone.

Voice announce blocking: A telephone can be set to block voice calls sent to it over the speaker. This feature also blocks SOHVA calls.

Z

Zone paging: Paging through the intercoms of some stations or departments in the system.

Publication Index**A**

Account Codes, Entering	7.4
Answering Calls	2.0
Answering Calls At Monitored Stations	2.4
Answering Intercom Calls	2.3
Answering Night Transferred Calls	2.5
Answering Outside Calls	2.2
Authorization Codes, Entering	7.5

B

Blocking Voice Announce Calls	7.2
---	-----

C

Call, Listening Over The Telephone Speaker	7.8
Call, Making A Call Non-Private	7.9
Call, Overriding At Another Telephone	3.11
Call Pick-Up, Making	2.6
Call Waiting	3.10
Calls, Answering At Monitored Stations	2.4
Calls, Answering Intercom	2.3
Calls, Answering Night Transferred	2.5
Calls, Answering Outside	2.2
Calls, Blocking Voice Announce	7.2
Calls, Diverting To Another Station	7.3
Calls, Forwarding To Another Station	7.6
Calls, Holding	4.2
Calls, Making	3.0
Calls, Making Intercom	3.7
Camping On At A Busy Station And Waiting For An Automatic Callback	3.8
Camping On At A Busy Station And Waiting For An Answer	3.10
Camping On At An Idle Station And Waiting For An Automatic Callback	3.9
Conferencing Calls	6.0
Conferencing Telephones Together	6.2

D

Dialing Automatically	3.2
Dialing Manually	3.3
Direct Inward System Access (DISA), Using	7.18
Diverting Incoming Calls To Another Station	7.3
Do Not Disturb Condition, Overriding A	3.11
Do Not Disturb Condition, Setting At Your Station	7.13
DSS Numbers, Storing	9.4

E

Entering Account Codes	7.4
Entering Authorization Codes	7.5

F

Feature Buttons, Storing The	9.5
Forwarding Calls	7.6

G

Glossary	G1
Group Listening	7.8

H

Handling Hold Recalls	4.3
Handling Park Recalls	4.5
Hold, Placing Calls On	4.0
Hold Recalls, Handling	4.3
Holding Calls	4.2

I

Identifying Your Telephone With Automatic Set Relocation	7.7
Intercom Calls, Answering	2.3
Intercom Calls, Making	3.7
Introducing The Telephone	1.0

K

Knowing Your Station's Functions	1.3
--	-----

L

Last Number Redial	3.4
Lighting The Message Waiting Light	8.2
Lights, Understanding What They Mean	1.4
Line Groups, Using	3.5
Listening To A Call Over The Telephone Speaker	7.8

M

Making a Subdued Off-Hook Voice Announcement	3.12
Making A Call Non-Private	7.9
Making A Call Pick-Up	2.6
Making A Hot Transfer	5.4
Making Calls	3.0
Making Intercom Calls	3.7
Message Waiting Light, Lighting The	8.2
Messages, Sending And Receiving Non-Verbal Messages	8.0
Messages, Sending LCD	8.3
Messages, Sending Response	8.4
Monitoring A Conversation Between Two Telephones	7.10
Music, Using Background	7.17
Muting Your Telephone	7.11

N

Night Transferred Calls, Answering	2.5
--	-----

O

Outside Calls, Answering	2.2
Overriding A Call Or A Do Not Disturb Condition At Another Telephone	3.11

P

Paging, Sending A Announcement	7.12
Park Recalls, Handling	4.5
Parking Calls	4.4
Personal Ring Tones, Setting Your	7.15
Placing Calls On Hold	4.0
Privacy, Making A Call Non-Private	7.9
Programming For Speed Dialing	9.2
Programming Your Telephone	9.0
Pulse And Tone, Switching The Dialing Mode . . .	7.16

Q

Quick Reference Guide	A1
Quick Transfer, Transferring Calls Using	5.5

R

Redialing A Previously Dialed Number	3.4
Redialing Last Dialed Number	3.4
Reminder Alert, Setting A	10.8
Responding To A Subdued Off-Hook Voice Announcement	2.7
Response Message Button, Storing The	9.6

S

Sending A Paging Announcement	7.12
Sending And Receiving Non-Verbal Messages . . .	8.0
Sending LCD Messages	8.3
Sending Response Messages	8.4
Setting A Do Not Disturb Condition At Your Station	7.13
Setting A Reminder Alert	10.8
Setting The Volume Control	7.14
Setting Your Personal Ring Tones	7.15
Speakerphone, Using Your	1.2
Speed Dial Numbers, Storing	9.3
Speed Dialing, Programming The	9.2
Station's Functions, Knowing Your	1.3
Storing DSS Numbers	9.4
Storing Speed Dial Numbers	9.3

Storing The Feature Buttons	9.5
Storing The Response Message Button	9.6
Subdued Off-Hook Voice Announcement, Making A	3.12
Subdued Off-Hook Voice Announcement, Responding To	2.7
Switching The Dialing Mode Between Pulse And Tone	7.16

T

Telephone, Introducing The	1.0
Tracker Paging System, Using The	7.19
Transfer, Making A Hot	5.4
Transferring Calls	5.0
Transferring Calls—Screened	5.2
Transferring Calls—Unscreened	5.3
Transferring Calls Using Quick Transfer	5.5
Troubleshooting Your Telephone	10.0

U

Understanding What The Lights Mean	1.4
Using Background Music	7.17
Using Call Forward Outside System (CFOS)	7.21
Using Chapter 2	2.1
Using Chapter 3	3.1
Using Chapter 4	4.1
Using Chapter 5	5.1
Using Chapter 6	6.1
Using Chapter 7	7.1
Using Chapter 8	8.1
Using Chapter 9	9.1
Using Direct Inward System Access (DISA)	7.18
Using E & M Tie Lines	7.20
Using Line Groups	3.5
Using The Other Telephone Features	7.0
Using The Tracker Paging System	7.19
Using This Guide	1.1
Using Your Speakerphone	1.2

V

- Voice Announce Calls, Blocking 7.2
- Volume Control, Setting The 7.14

W

- Waiting For A Line 3.6

Appendix A - Quick Reference Guide

This chart provides you with a quick reference guide of the feature dialing codes. If you wish, you can detach this sheet and keep it near your telephone to serve as a stand-alone reference. See section 9.5 for programming feature codes.

Feature	Enable Code	Disable Code	Button Mnemonic
Account Code	ITCM * 04 + account code		ACCT
All Call	ITCM 70		PAGE1
Attendant Calling	ITCM 0		
Authorization Code	ITCM # 08 + authorization code		AUTH
Automatic Call Back and Call Waiting	ITCM * 6	ITCM # 6	CAMP
Automatic Redialing			ARD
Background Music	ITCM * 11 or 12	ITCM # 1	MUSIC1 MUSIC2
Call Divert Station	ITCM * 55 + extension no.		
Call Forward, Personal	ITCM * 51 + extension no.	ITCM # 5	FWD-P
Call Forward, All Calls	ITCM * 52 + extension no.		FWD-A
Call Forward, Ring-No Answer, All Calls	ITCM * 54		FWDRA
Call Forward, Ring-No Answer, Personal Calls	ITCM * 53		FWDRP
Call Park, Orbit 91-99	ITCM * (91-99)		PARK1-9
Call Park, Pick Up	ITCM # (91-99)		
Call Pick Up, Directed	ITCM * 4 + extension no.		DPKUP
Call Pick Up, Group	ITCM # 4		GPKUP
Clear Major Alarm Ring	ITCM # 09		
DISA Access	Installer Assigned		
Do Not Disturb	ITCM # 01		DND
Do Not Distrub Override	extension no. + * 03		EXOVR

Feature	Enable Code	Disable Code	Button Mnemonic
DSS Programming	ITCM * * 3		
Executive Override	extension no. + * 03		EXOVR
Hold, Manual	HOLD		HOLD
Hold, Exclusive	HOLD + HOLD		HOLD
Hold, Directed	ITCM * 90		
Hold, Directed Pick Up	ITCM # 90		
LCD Messaging	ITCM * 02 + message	ITCM # 02	LCDMS
Line Group 1	ITCM 9		LNG01
Line Group 2–11	ITCM 80–89		LNG02–11
Line Groups 12–16	ITCM 60–64		LNG12–16
Line Pick Up From Any Station, Zones 1–4	ITCM 65–68		TAFS1–4
Line Pick Up From Any Station, All Zones	ITCM 69		TAFS*
Meet Me Answer Page	ITCM 78		MMEPG
Message Waiting	ITCM * 3 + extension no.	ITCM # 3 + extension no.	MSGWT
Message Wait Retrieval	#00		
Night Transfer (Attendant Only)	ITCM * # 0 * 031	ITCM * # 0 * 032	NIGHT
Operator Access	ITCM 0		
Paging, All Call	ITCM 70		PAGE1
Paging, Zones 2–8	ITCM 71–77		PAGE2–8
Paging, Meet Me	ITCM 78		MMEPG
Park Orbit Retrieve	ITCM #91–99		PARK1–9
Park Orbit Send	ITCM *91–*99		
Personal Ringing Tones	ITCM * * 4 + tone code (1–8)		
Redial Last Dialed Number	#		
Remote Station	ITCM * 05 + extension no.	ITCM # 05 + extension no.	
Response Message	ITCM **6 + button + 01–30		RSPnn (nn= 1–30, *)

Feature	Enable Code	Disable Code	Button Mnemonic
Service Observing	ITCM # 03 + extension no.		S-OBS
Speed Dial, Station	1-0		SDIAL
Speed Dial, System	* 100 * 599		
Speed Dial, Programming	ITCM * * 1		
Station Lock	ITCM #04 + code		LOCK
Tracker Page, Send	ITCM *8		TRACK
Tracker Page, Receive	ITCM #8 + orbit code		
Tracker Pager Use	ITCM #07	ITCM #06	
Volume Save	ITCM * * 7		VOLSV
Voice Announce Block	ITCM * 2	ITCM # 2	VABLK

NOTE: *The dialing codes provided in this quick reference guide are default values. Your system installer has the ability to renumber these codes.*

The following table details several unique dialing codes that are only applicable to single line proprietary and industry-standard telephones.

Feature	Enable Code		
Pick Up Last Line	*08		
Broker's Mode	*07		
Speed Dial Access Code	*01		
Saved Number Redial	*06		
Dial Saved Number	*09		
TAP Dialing Code	##		

This page remains blank intentionally.

Personal Notes

Personal Notes

This manual has been developed by Comdial Corporation (the "Company") and is intended for the use of its customers and service personnel. The information in this manual is subject to change without notice. While every effort has been made to eliminate errors, the Company disclaims liability for any difficulties arising from the interpretation of the information contained herein.

The information contained herein does not purport to cover all details or variations in equipment or to provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser's purposes, contact Comdial, Inside Sales Department, P.O. Box 7266, Charlottesville, Virginia 22906.



Printed in U.S.A.

**GCA70-224.05
02/97**